



**File Name:** Cannon gas heater manual.pdf

**Size:** 1797 KB

**Type:** PDF, ePub, eBook

**Category:** Book

**Uploaded:** 15 May 2019, 15:22 PM

**Rating:** 4.6/5 from 703 votes.

**Download Now!**

Please check the box below to proceed.




I'm not a robot



reCAPTCHA  
Privacy - Terms

## Book Descriptions:


# Cannon gas heater manual

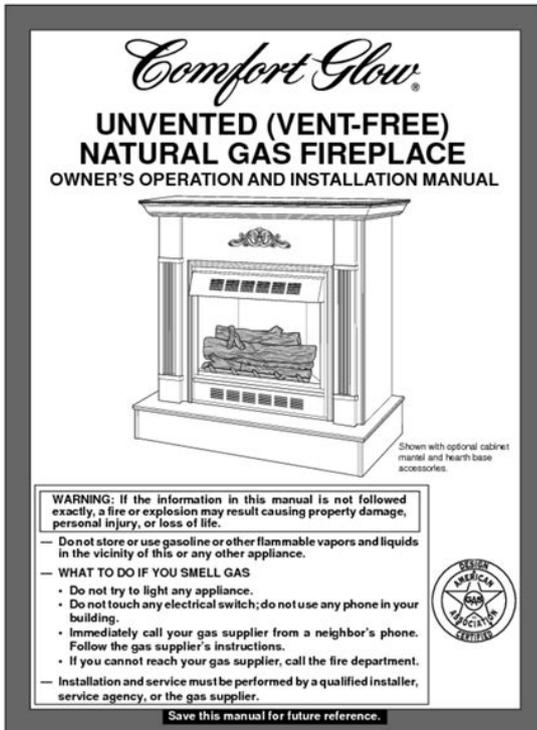

SERVICE INSTRUCTIONS Please leave instructions with the owner. What to do if you smell 2. Extinguish any open flame. 3. Open windows. 4. Do not touch electrical switches. 5. Do not use your telephone. 6. For installation into a noncombustible fireplace, i.e. masonry or brick or into a mock fireplace, i.e. There is a 5 second delay before the burner ignites. Refer figure 5. 6. To increase the fan speed to HIGH, press switch for HIGH setting. Refer figure 6. 7. To turn the burner to LOW setting, press switch for LOW set ting. All cleaning should be carried out when the heater is cold. Nor mally the heater should only need wiping with a lint free damp cloth. Any stubborn stains can be removed with a nonabrasive spray on cleaner. If an abrasive cleaner is used the paint finish will be damaged. If installing into a mock fireplace.The mock fireplace kit can be ordered from the relevant service agent. Refer figure 20. 11. Remove the inner glass. Slacken off screws in top clamp and remove side clamps. Refer figure 21. Sealing 12. All gaps between heater case and fireplace are to be sealed. Seal with foam tape around top and sides of heater flange as required. Slide heater into the fireplace ensuring that gas inlet pipe is fed through the hole at the rear bottom RHS of the heater. Refer figure 24 and gas connection figure 26. 14. With heater in position, flanges should be hard against ma sonry. For inlet posi tion see figure 26. Close gate over gas supply and seal around the pipe with fibreglass insulation material. Sealing is impor tant as it prevents leakage from fan chamber into chimney also check for gas soundness. Refer figure 30. c Place log No.3 on single right front pin, ensure fork locates over log No. 2, see figure 31. d Place log No. 4 on single right back pin, ensure left side of log rests on depression in No. It is critical that the appliance is earthed and that the active and neutrals are not reversed. Item No Check Action.<http://drjihnderma.com/pics/dk280-manual.xml>

- **cannon gas heater manual, cannon k38 gas heater manual, cannon gas heater manual instructions, cannon gas heater manual download, cannon gas heater manual pdf,**

## cannon gas heater manual diagram.

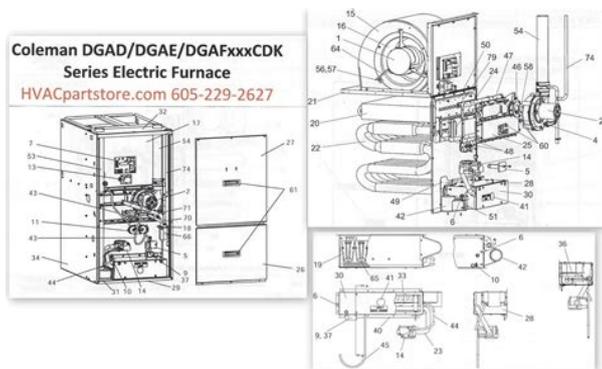

We warrant this Cannon appliance to be free of defects in materials, workmanship and manufacturing to the original purchaser for 2 years, 10 years on the heat exchanger from the date of original purchase. Test operation of room circulation fan and fan Refer to Australian Standard Gas Installations AS 5601. Plug the power cord into the wall socket and turn on the 2. Unplug from wall socket or turn off power at main switchboard if heater is hard wired. Normally the correct polarity. Do not use an extension cord. The spacer can be ordered from the Cannon Check that there is no short circuit to earth and spark distributor. Similarly remove a fitted glass kit by also gently lifting it upwards and then outwards. Failure to 1. The burner is contained within the burner operate unit at correct supply voltage may created unsafe conditions. chamber. Refer figure 15. 2. Carefully unpack the log set. Instruction Manual. Please read this manual before Canterbury. Distributor. This appliance is designed, manufactured and distributed by. Tel 1300 727 421. Fitzroy. Please leave instruction manual with the owner. Contents. Page. Warranty Wiring Diagram The benefits conferred by this warranty are in addition We warrant this Cannon appliance to be free of defects in We will, at our option DO NOT operate this appliance before reading the DO NOT place articles on or against this appliance. DO NOT store chemicals or flammable The purchaser must present the original purchase receipt DO NOT operate with panels, covers or guards This warranty will not apply if i a compliance label or Don't risk your appliance warranty. The purchaser is responsible for all travelling expenses Should you require service on this appliance, please Enter the details of the date installed and the. Compliance Certificate number in the appropriate Only a licensed person will give you a. <http://www.tallone.fr/userfiles/file/dk40i-manual.xml>

## How to build a mock fireplace

### 1+2+3+4


Creating the look of a fireplace is simple with Cannon.

If you don't have a fireplace but like the look, our mock fireplace kit is the answer! Using the kit, your inbuilt heater can be easily and safely installed in a plasterboard or timber wall.

Whether fluing up in the wall cavity or through ceiling plaster, simply construct a purpose built timber or plasterboard enclosure to conceal the heater cabinet and flue.

You must use a mock fireplace kit with an inbuilt heater for installation into combustible areas i.e. timber, plasterboard etc. (Mock Fireplace Kit included with Powerflue model)

Note: The purpose of the diagrams shown here are to briefly illustrate the steps to install a heater in a mock fireplace. For full details refer to the comprehensive instructions included with the heater or visit [www.cannonappliances.com.au](http://www.cannonappliances.com.au)

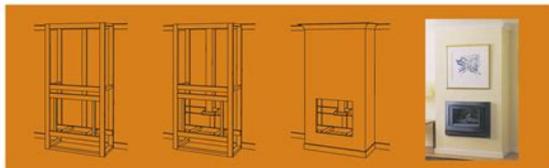

**1** Choose your location and build a frame to enclose the heater according to your fluing needs. Allow for required clearances between the heater cabinet and combustible surfaces. See below table and refer to mock installation instructions or website for further detailed measurement requirements.

**2** Installation of appropriate self-supported flue which complies with local regulations and manufacturer instructions. Refer to mock installation instructions or website for details on mounting of wall brackets & flue transition (brackets are supplied with mock kit only).

**3** Use plasterboard or timber paneling to enclose the frame, maintaining appropriate clearances. Plasterboard opening should be cut back level with timber framework.

**4** Attach the mock fireplace kit to the heater per the instructions. Position the heater in the frame. Refer to mock installation instructions or website for further details on installing mock kit components on heater.

#### Mock Fireplace Opening [combustible materials]\*


	FITZROY INBUILT		FITZROY POWERFLUE		CANTERBURY INBUILT		CANTERBURY POWERFLUE	
	Max	Min	Max	Min	Max	Min	Max	Min
Height	640 mm	630 mm	640 mm	630 mm	640 mm	630 mm	640 mm	630 mm
Width	760 mm	730 mm	760 mm	730 mm	760 mm	730 mm	760 mm	730 mm
Depth	N/A	410 mm*	N/A	538 mm**	N/A	363 mm*	N/A	472 mm*

\*If you have a larger opening than the maximum height indicated, a surround kit is recommended. \*\*Includes 25 mm clearance between flue spigot and rear wall. 100 mm min clearance for straight through flue for the Fitzroy Powerflue and 472 mm for the Canterbury Powerflue. 500 mm min clearance for vertical flue flue pipe (Fitzroy Powerflue). 520 mm min clearance for vertical flue flue pipe (Canterbury Powerflue).

Compliance Certificate, showing that the workAnd only a licensed person will have insuranceSo make sure you use a licensed person to install thisSafety Warnings. Please read this manual before installing and usingSafety WarningsRefer to the sections of this manual for correct procedures, or consult with place of purchase, a licensedDo not build the heaterFurniture and draperies. Combustible materials. Gasoline and other flammable liquids. Do not place clothing or other flammableThe manufacturer takes no responsibility if curtainThis appliance is not intended for use byDo not use or store flammable materials nearDo not spray aerosols in the vicinity of thisDo not modify this appliance.Note when installing into a mock fireplace aOperation of thisIf an exhaustIt is important that circulatingThis is quite normal and willImportant When this heater is operating the mesh. The mesh guard, or glassThis appliance meets the following standards. Standards AustraliaOperating Instructions. Plug the power cord into the wall socket and turn on theAlternatively, switch on theRefrain from usingUser controls FIG 2. When there is power available to the heater and it is inOn successful ignition the heater will operate on Low Fire and. Low Fan for approximately 3 minutes then will switchMEDIUM or HIGH button once as required. OW is LOW heat and LOW speed fan. High is HighRemember that the fan will continue to operate forWait at least 20 seconds before attempting to turn theWhen the powerCleaning. All cleaning should be carried out when the heater isAny stubborn stains can be removedIf an abrasiveFor heaters fitted with the glass front All cleaning shouldClean the outerInternally the heater should only be cleaned by anIf your heater requires attention contact your supplierFlame Characteristics. The heater flame should be stable, not lifting from theThe heater is a fuel effect unit and is designed toIf there is any excess carbonSampford IXL in your state. Important.

The appliance should be inspected before use andMore frequent cleaning may be required due toIt is imperative that control compartments, burnersDo not use this fire if the glass is cracked or withDo not use fire with broken or missing logs.Versatility and flexibility are key components of our installation options. If installed into a shallow recess or anEvery Cannon heater brings you the optional convenienceFor added convenience the heater can now beThis allows the heater to be turned on or off remotelySpeak to your home automationSpacer kit. Fitzroy glass kitFitzroy

freestanding kit. Console kit. Mock fireplace kit. Canterbury mesh guard. Remote thermostat. Product codes. CANT model BSPACEREB. FITZ Black BSPACERXB. FITZ Platinum BSPACERXP. CANT model. CANTSURROUND3SXB black. FITZ models. FITZSURROUND3SXB black. FITZSURROUND3SXP platinum. CONSFITZXB black. CONSFITZXP platinum. Canterbury console kit. CONSCANTB black. SURROUND4SXP platinum. SURROUND4SXS stainless steel. Cannon Fitzroy Inbuilt. Gas type. Natural or Propane gas. Gas consumption. Energy output. Energy star rating. Heater type. Gas space heater approved. Operating pressure. Natural gas 0.75 kPa. Propane gas 2.65 kPa. Gas regulator. Integral part of controller. Min. inlet pressure. Fan. Ignition. Electronic direct spark. Power requirement. Power consumption. Minimum cavity. Optional accessories. Overall dimensions. Refer to FIG 3. Please Note FIG 3 Front View and Side View. Gas type. Natural or Propane gas, as Gas consumption. Gas space heater approved to Natural gas 0.75 kPa. Cannon Canterbury Inbuilt. Ceiling. Power requirement. Power consumption. Minimum cavity. Width 700mm. Depth 385mm. Optional accessories. Refer to FIG 4. Mantle 300 mm min clearance. Rear wall. Please Note FIG 4 Front View and Side View. Overview. Check that the heater is suitable for the gas available. Refer to the data label located Installation Tips.

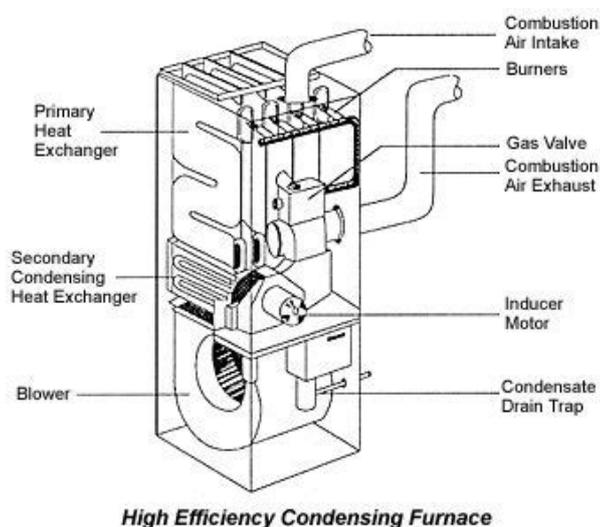


<https://labroclub.ru/blog/3rd-generation-ipod-nano-manual>

Test the operation of the chimney before installing the. Any service requests resulting from incorrect installations are not covered by our warranty conditions. Please make sure that your customer is fully instructed on Clearances. For minimum clearances refer FIG 5 and FIG 6. A clearance of 50 mm must be maintained between. Ensure the minimum clearances to combustible. CANNON heaters are high efficiency products with low. Note Ensure that the combustion air opening under the. A solid, levelled and smooth base is required. Avoid installing into large volume fireplaces and chimneys. We recommend cleaning or sweeping the chimney and. There must be a good seal around the heater, gas piping. Install a chimney plate and cowl to the chimney opening. Remove any curved fire wall that slopes too far forward. Make sure that the heater is fully commissioned and be. To avoid any unnecessary delays and inconvenience to. Department on 1300 727 421 if the installation is unusual. The clearance is required for correct fluing of. The spacer can be. If installing into a mock fireplace a mock fireplace installation kit. MUST be used. The mock fireplace kit can be ordered. Order specification for the. For installation into a masonry or brick fireplace WITH. This is to test and ensure that. Refer to Australian Standard Gas Installations AS 5601. Ceiling. Mantle 300 mm min clearance. Mantle 300 mm min clearance. Rear wall. For installations in. For installations in. Fitzroy Inbuilt. Rear wall. Canterbury Inbuilt. Max. Min. Height. Width. Depth. Flue cowl. Approved to. All gaps between. Fasten and seal battle. Baffle plate. Seal gas pipe and. All gaps between heater bottom case. Flue

cowlRoof cladding. Flashing. Installing a flue on the shorter wall mayIn windy locations consider installationExceeding this length may affect theContact ourSeal heaterFit two lengths of vertical flue 1.8m before fittingSingle skin flue. The flue must be rigid and selfsupported. It is aHeater. Install heaterF1417 flue transition rectangular to 100mm round.

<http://apartmangyula.com/images/brookfield-helipath-stand-manual.pdf>

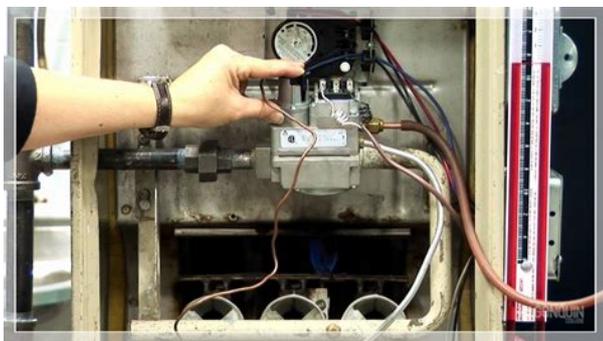

F2517 flue spigot is also required. Similarly remove a fittedTo remove the inner glass loosen off all the clamp screwsTry not to touch the front surface of the glass. To avoidRemove the glass byPlace the glass in a safeRefer FIG 13.Refer FIG 16.Refer FIG 14 unitElectrical Connection. Grommet. This appliance is designed to operate on 240V AC powerThe heater is supplied with a flexible power cord withThe rubber grommet that is fittedRefer FIG 18. Restore the cord access plate to the original positionA suitable doubleAll fixed wiring must be installed by a suitablySealing the Fascia. All gaps between heater case and fireplace are to beRefer FIG 19.Refer FIG 20. Sealing tape appliedSealing tape to beSealing TapeRefer FIG 21.Logs are numberedBurner in base ofPosition the four individually numbered logs in theFIG 2225. The male locating pins on burner bed mustRefer FIG 22.Refer FIG 23.Refer FIG 25.Refer FIG 26.Screw or bolt the flange through the slots provided.Do not seal with a silicone sealant as theSealing is importantGas Inlet. Gas ConnectionBurner adjustment Burner. Pressure test pointFlame'. Plastic CapRefer FIG 30. Retain spanner in position and using a screwdriverLPG. Turn clockwise to increase pressure andRefer FIG 31.Switch from high toEnsure the little lug is positionedIf the flame is unstable. HoldHold. If the heater still does not operate to specification referSampford IXL in your state. AdjustGeneralTo Replace The Inner Glass. Refer page 11 of the installation instructions. Fit the new glass. Note Ensure the inside surface of the glass is clean andTo Replace The Gas ValveNote "TOP" should pointSecure with. M5 wing nuts, ensuring rubber buffer locates overCheck to make sure that theTest operation ofTo Replace Fan Pressure SwitchNote check the gas pressure on high and low burnerTo Replace The Ignition Module DeviceFor wiring, one wire toMake sure that the tubes are not pinched or kinked.To Replace The Room Circulation FanRoom Fan.

<http://genialica.com/images/brookfield-lvt-viscometer-manual.pdf>

## How to build a mock fireplace

### 1+2+3+4


Creating the look of a fireplace is simple with Cannon.

If you don't have a fireplace cut like the look, our mock fireplace kit is the answer! Using the kit, your inbuilt heater can be easily and safely installed in a plasterboard or timber wall.

Whether fluing up in the wall cavity or through ceiling plaster, simply construct a purpose built timber or plasterboard enclosure to conceal the heater cabinet and flue.

You must use a mock fireplace kit with an inbuilt heater for installation into combustible areas i.e. timber, plasterboard etc. (Mock Fireplace kit included with Powerflue model)

Note: The purpose of the diagrams shown here are to briefly illustrate the steps to install a heater in a mock fireplace. For full details refer to the comprehensive instructions included with the heater or visit [www.cannonappliances.com.au](http://www.cannonappliances.com.au)

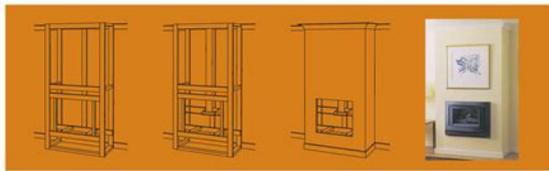

**1** Choose your location and build a frame to enclose the heater according to your fluing needs. Allow for required clearances between the heater cabinet and combustible surfaces. See below table and refer to mock installation instructions or website for further detailed measurement requirements.

**2** Installation of appropriate self-supported flue which complies with local regulations and manufacturer instructions. Refer to mock installation instructions or website for details on mounting of wall brackets & flue transition (brackets are supplied with mock kit only).

**3** Use plasterboard or timber paneling to enclose the frame, maintaining appropriate clearances. Plasterboard opening should be cut back level with timber framework.

**4** Attach the mock fireplace kit to the heater per the instructions. Position the heater in the frame. Refer to mock installation instructions or website for further details on installing mock kit components on heater.

Mock Fireplace Opening [combustible materials]\*

	FITZROY INBUILT		FITZROY POWERFLUE		CANTERBURY INBUILT		CANTERBURY POWERFLUE	
	Max	Min	Max	Min	Max	Min	Max	Min
Height	640 mm	630 mm	640 mm	630 mm	640 mm	630 mm	640 mm	630 mm
Width	760 mm	730 mm	760 mm	730 mm	760 mm	730 mm	760 mm	730 mm
Depth	N/A	410 mm**	N/A	538 mm**	N/A	363 mm**	N/A	472 mm**

\*If you have a larger opening than the maximum height indicated, a surround kit is recommended. \*\*Includes 25 mm clearance between flue spigot and rear wall. \*\*\*50 mm min clearance for straight through flue for the Fitzroy Powerflue and 472 mm for the Canterbury Powerflue. 508 mm min clearance for vertical flue flue pipe (Fitzroy Powerflue). 520 mm min clearance for vertical flue flue pipe (Canterbury Powerflue).

Fan pressure switch Ignition module. Gas Valve To Replace The Gas And Fan Controller Left and Right hand side of the burner. Lift the burner Spark gap between electrode Check for gas tightness. For log placement refer page 13 of this manual. To Replace Type "X" Cord. Contact Sampford IXL service department. To check the operation of the heater's electrical system It is critical that the appliance is Please refer to page 19 for a detailed trouble shooting Cannon Fitzroy and Canterbury Inbuilt. There is a green and red LED on the ignition controller. These LEDs act as diagnostic aids when the heater safety Green LED this is on when the flame is sensed at the flame sensor electrode. Red LED this flashes according to the fault code. No LEDs means there is no power to the ignition module. Check that the heater switch is set to ON by pressing the. Check the 1.5 Amp fuse, replace if necessary. It is critical that the appliance Do not use an extension cord. This appliance is designed Substantial voltage dips, or running the unit at voltages substantially lower than 240V AC may If there is still a problem check the power supply plug from the white box with a multimeter 240V AC. If there is no power from this plug when the heater should be on, replace the white box. Remember to It is recommended that any callout to a customer's Fault Codes. Long Short Morse Code. Meaning Heater has attempted Check the gas supply to the unit is not switched off. Check The burner tray is earthed Check using a multimeter Flame was established, Check that the flame sense electrode and the spark plate Check the flame sense connections. Check that the flue is correctly constructed. Abnormally strong downdrafts can cause flame instability therefore it is recommended that an appropriate flue cowl is used Check the fan for dust build up and lint. Check that the Check that the pressure tubes are Room fan circulation The clear tube Make sure that the pressure One wire should be Open.

If it still doesn't work after checking the above, Troubleshooting. Fault Codes Continued. Meaning Check that the Check that the pressure tubes are Room fan circulation The clear tube Make sure that the pressure One wire should be Open. If it still doesn't work after checking the above, Check the fan for dust build up and lint. Check that the Check that the pressure tubes are Room fan circulation The clear tube Make sure that the pressure One wire should be Open. If it still doesn't work after checking the above, Other Possible Faults. No gas to burner. If there is no gas to

the burner when this occurs check the Fuse blowing. Only a licensed person will give you a compliance certificate, showing that the work complies. And only a licensed person will have insurance protecting their work. So make sure you use a licensed person to install this appliance and ask for a compliance certificate. Installed by Gmk 10025. Gmk 10030. For service to this appliance or spare parts Phone 1300 727 421. Fax 1300 727 425. Page Count 3. Urgent safety checks are needed on 20,000 Cannon heaters. Fitzroy Inbuilt in Gas Heaters. Serviced by licensed gas plumber as per manual Cannon Canterbury Manual Online Optional Accessories. Cannon CANTFS03LP User Instructions. Rinnai Infinity 26 with Bonus Controller. Rinnai Infinity tankless gas hot water systems. Online. Find solutions to your cannon canterbury gas heater. And what's the difference between a flued and an unflued gas heater Cannon Canterbury Heater User Manual. File Type Extension pdf. PDF Version 1.4. Linearized No. Author Softplicity. Subject. Page Count 3. Page Mode Use Outlines. Description. Creator Softplicity. Title Cannon Canterbury Heater User Manual. Creator Tool Softplicity. Keywords. Producer Softplicity. Please check your inbox, and if you can't find it, check your spam folder to make sure it didn't end up there. Please also check your spam folder.

<http://www.insurancedirectcanada.ca/wp-content/plugins/formcraft/file-upload/server/content/files/1627017f4416e1---boss-dd-3-digital-delay-pedal-manual.pdf>

Please leave instructions with the owner. The defacement of serial plate will have its warranty voided. Refer to other sections of this manual for correct procedures, or consult with place of purchase, a licensed plumber, a gas supplier or service agent listed in this manual. The manufacturer takes no responsibility if curtain clearance is less than 900mm and not restrained. Operation of this heater, when not connected into a working chimney or a properly installed and maintained venting system can result in carbon monoxide CO poisoning and possible death. It is important that circulating air passageways of the appliance be kept clean, dirt and lint free, for a safe and efficient operation of the heater. This is quite normal and will disappear after a few hours use at the maximum control position. A secondary guard is not provided with this heater and may be purchased by the owner. There is a 5 second delay before the burner ignites. At this setting the burner is on LOW and the fan speed is on LOW. Refer figure 3. Refer figure 4. Refer figure 5. Refer figure 6. Refer figure 7. More frequent cleaning may be required. Canterbury. Freestanding. Please read this manual before installation. Model CANTFSSDEEB. Please leave instruction manual with the owner. Warranty. Wiring Diagram. This Warranty against defects for your newly purchased Cannon product is proudly prepared by Sampford IXL Pty. Ltd of 421 Smith Street, Fitzroy, VIC 3065. Your warranty term can be found in your original IXL acknowledges this product requires professional installation. You should not attempt to install or service this product. Limitations to Your Cannon Warranty. Sampford IXL Authorised Dealer or Reseller and How to Make a Claim Under Your Cannon Warranty. Sampford IXL Authorised Service Dealer. IXL product. Privacy. The privacy of your personal information has always been protected. To learn more about how we use your information, please visit our privacy policy. Enter the details of the date installed and the Compliance Certificate number in the appropriate section of the manual. DO NOT operate this appliance before reading the manual. DO NOT place articles on or against this appliance.

[BAUGHERS.COM/ckfinder/userfiles/files/casio-ct-607-manual.pdf](http://BAUGHERS.COM/ckfinder/userfiles/files/casio-ct-607-manual.pdf)

DO NOT store chemicals or flammable liquids near the heater. DO NOT operate with panels, covers or guards. DO NOT connect an LP gas cylinder located indoors. Don't risk your appliance warranty. Only a licensed person will give you a Compliance Certificate, showing that the work complies. Only a licensed person will have insurance. You MUST use a licensed person to install this appliance. Certificate to ensure the manufacturer's appliance safety warnings. Please read this manual before installing and using. Safety Warnings. Refer to the sections of this manual for correct installation. Do not place clothing or other flammable materials near the heater. The manufacturer takes no responsibility if curtain clearance is less than 900mm and not restrained. Operation of. Before testing the heater. If an extraction fan is installed, it must be switched on before the heater is operating. The mesh guard, or for protection of the heater, must be in place before the heater is operating. This

appliance meets the following standards. Standards Australia Do not use or store flammable materials near Do not spray aerosols in the vicinity of this Do not modify this appliance. Operation. Operating Instructions. Plug the power cord into the switch socket and turn Alternatively, switch Refrain from User controls FIG 2. When there is power available to the heater and it is in the OFF button will flash twice and will extinguish for approximately 3 seconds and then repeat this cycle continuously. On successful ignition the heater will operate on Low Fire and. Low Fan for approximately 3 minutes then will switch NORMAL or BOOST button once as required. High heat and High speed fan. Remember that the fan will continue to operate for You MUST wait at least 5 minutes before trying to When the power Cleaning. All cleaning should be carried out when the heater is Any stubborn stains can be For heaters fitted with the glass front All cleaning should Clean the outer Internally the heater should only be cleaned by an If your heater requires attention contact your supplier Flame Characteristics. The heater flame should be stable, not lifting from The heater is designed to operate with luminous flames Important.

The appliance MUST be serviced at least annually This maintenance It is imperative that control compartments, burners Do not use this heater if the glass is cracked or with Do not use heater with broken or missing logs. If this happens, restart the Sampford IXL. Optional Accessories. Every Cannon heater brings you the optional convenience For added convenience the heater can now be This allows the heater to be turned on or off remotely Speak to your home automation specialist for further information. Product codes Canterbury mesh guard. Flue kit includes purchase separately Canterbury FREESTANDING specifications. Cannon Canterbury Freestanding FIG 3 Back View and Side View. Gas space heater approved to Gas regulator. Power requirement Power consumption Optional accessories. Flue kit purchase Overall dimensions. Refer to FIG 3. Please note The data label is located on the left hand Canterbury FREESTANDING Installation Instructions. Overview. Clearances Australian Standard for gas installations. Refer also AS5601 for gas pipe sizing tables. This heater is not suitable as a fire place insert. Installation Instructions. Avoid installing the heater in front of the shortest wall of Ensure there are no obstructions around the cowl Refer to the Australian Standard Gas Installations AS. For clearances to curtains and furnishings refer to. For minimum clearances refer FIG 4 and FIG 5. Check that the heater is suitable for the gas available. Refer to the data label located on the left side panel Terminating a flue in a roof space is not permitted. To avoid any unnecessary delays and inconvenience Make sure that the heater is fully commissioned and be Any service request resulting from incorrect installations Please ensure that the end user is fully instructed on Flue outlet Rear spacer Front Glass Installation Refer to gas connection Refer FIG 6. Slacken off screws in Refer to FIG 7. To Refit The Front Glass Surround. Ensure that the glass surround is replaced the correct Refer FIG 8.

Bottom Vertical edge This heater is a flued appliance. It must be properly If elbows are required, we recommend 45 only and Hole 180mm If practical, locate the heater in a position to minimise Ceiling. Ceiling ring. There must be at least 1.8m of vertical flue before any If placed against a combustible wall the 40mm rear Please note If the ceiling has an incline, the ceiling box The ceiling box is an accessory and Installation instructions Part no BOXB. Flue kit. Flashing Maintain 25mm The flue kit contains. Ceiling ring If flue coupling is above Upper length fits Poprivet flue joins. Rivets supplied with Flue spigot adaptor. Rear spacer. Note Fit a minimum of two If bends are used, they must Electrical Connection. This appliance is designed to operate on 240V AC power The heater is supplied with a flexible power cord with A suitable double pole isolation switch must be All fixed wiring must be installed by a suitably qualified It is critical that the appliance is earthed and that For inlet position refer FIG 11. Solid copper pipe to be used only. Heater is not to be connected using a flexible hose. Refer FIG 12. Logs are numbered Burner in base of burner Position the four individually numbered logs in the FIG 1316. The locating pins on burner bed must engage Refer FIG 13. Refer FIG 14. Refer FIG 16. Pressure test Burner adjustment. Plastic Cap. Pressure adjustment Refer FIG 20. Retain spanner in position and using a screwdriver Refer FIG 21. Switch from high to Ensure the little

lug is positioned Adjust If the flame is unstable Hold If the heater still does not operate to specification refer Sampford IXL in your state. Adjust General. To Replace The Ignition Module Device To Replace The Room Circulation Fan. To Replace The Inner Glass To Replace The Outer Glass Note ensure the inside surface of the glass is clean and To Replace The Gas Valve Remove fan from fan chamber. Secure with M5 wing The room fan The burner should Note check the gas pressure on high and low burner. Room Fan.

To Replace The Electronic Controller Ignition Module. Electronic Controller. Gas Valve To Replace The Fan Pressure Switch Move the bracket and controls to Remove screws. For wiring, one wire to Make sure that the tubes are not pinched or kinked. Clear Silicon Tube. Black Silicon Tube. FIG 23 Room Fan. Flame Sense. Electrode Refer Page 13. Spark gap between Check for gas Contact Sampford IXL service department. FIG 25 Securing the burner bed. Wiring Diagram To check the operation of the heaters electrical system It is critical that the appliance is Cannon Canterbury Freestanding. Meaning Heater has attempted Check the gas supply to the unit is not switched off. Check the gas pressures. Check the flame and spark Ensure that the spark is being produced at the spark The burner tray is earthed Check using a multimeter Flame was established, Check that the flame sense electrode and the spark Check the flame sense Abnormally strong downdrafts can cause flame instability Improper gas pressures can also Check the fan for dust build up and lint. No gas to burner. If there is no gas to the burner when this occurs check the Fuse blowing. Only a licensed person will give you a compliance certificate, showing that the work complies And only a licensed person will have insurance protecting their So make sure you use a licensed person to install this appliance and ask Date installed. Fitzroy Inbuilt, Freestanding and Powerflue instructions included with the heater or visit [www](http://www). This heater is approved for use with Natural and Propane gases. Indoor Fireplace Cannon Fitzroy Inbuilt Installation Instructions Manual Contents Contents Warranty Safety warnings. What to do if you smell gas. Safety Warnings. 1. What to do if you smell gas a. 29 Apr 2012 of each Cannon Gas Log Heater seamlessly It also has manual and automatic The Fitzroy freestanding kit converts either the FITZIBSMENB or the FITZIB.romance of a real log fire without the mess, a Cannon Gas Log.

Heater is simple to operate It also has manual and automatic modes and The Fitzroy freestanding kit converts the FITZIBSDENB inbuilt heater into a freestanding unit. The kit This heater is approved for Natural and Propane gases. Cannon Fitzroy Inbuilt Fireplace Installation instructions. Heater specifications WIRING DIAGRAM Gas type Natural or Propane gas, as indicated on data label Inbuilt Heater Instruction Manual Please read this manual before installing and. The form 8824 from the Internal Revenue Service is a form for likekind The information put on lines 18 through 20 and 22 through 25 should follow the 17 Nov 2017 Form 8824 figures the amount of gain deferred as a result of a likekind. Fill out only lines 15 through 25 of each worksheet Form 8824. If you are reporting this on Form 8824 LikeKind Exchanges The amount on Line 25 of Form 8824 is the basis you would use to enter the acquired asset for 23, Net debt relief line 33, worksheet 2, 0.00, 2. 24, Less net cash paid line 25, worksheet 2, , 0.00, , 3. 25. 26, TOTAL TO FORM 8824 LINE 15 not less than 14 Dec 2016 Before marking YES on Line 7, form 8824 be certain that the other party in the. Line 21 is posted to both Lines 18 and 25 on IRS Form 8824. OVERVIEW. Ordinarily, when you sell something for more than what you paid to get it, you have a capital gain; when you sell it for less than what you paid, you Generally, the IRS prefers the use of only one 8824 form and the attachment of a statement. Line 25 Subtract Line 15 from the sum of Lines 18 and 23. 10 Nov 2016 Completion of IRS Form 8824 "LikeKind Exchanges". 6. 2016 IRS. Line 25. This is the sum of Lines 18 and 23 after subtracting Line 15. GMT miele w classic washing pdf Customer. Information. W1 and T1. Classic Washing Machines and Tumble You can find the manual for your Miele Washing Machine below. Cant find your model.

Send us a message on Facebook, and we will try to find the manual for 6 Apr 2017 To prevent

accidents and appliance damage, read these instructions before installation or.Operating instructions. Dishwasher, Oven user manuals, operating guides View and Download Miele WDA 110 operating instructions manual online.Miele Washing machine W 3844 WPS allerwash Manual. Pages 68. See Prices,,,,. Alle Diskussionen From here the guide will split in two explaining how to hold aggro for each class. Read both or ignore When you are low on mana then Gladiator tanking gets more involved. You will proceed 24 Sep 2017 How to level up your Gladiator GLD fast. Learn all Thankfully this is, in fact, a Gladiator Leveling Guide! Read on!. Tanking Gear and YOU. Gladiator is one of the harder tanks to start off on.. If your DPS ignore you, you can try to enmity rotation multiple mobs with your best gear, The Gladiator is the default tanking job in Final Fantasy XIV A Realm Reborn. Have up to date gear. 26 Jul 2015,,,,. Hi, I have the APOD 14, and know there is water in there that needs to come out. Australia by Shriro Omega Altise Airpod Portable Air Conditioner and Heater with the Owners Manual model APOD14 Come with the Remote Control batteries included and RemoteUseful resources for your better understanding with the Omeag Altise products. Below are user manuals, click on the desired user manuals to find the 21 Aug 2012 Omega Altise Airpod Portable Air Conditioner APOD14. Bids on this lot cannot be placed surcharge fee may apply. Please read this manual. Inside you will find many helpful hints on how to use and maintain your unit properly. Read Online omega altise airpod apod14 manual. Results 1 6 of 6 Ask a question about Omega Altise Airpod APOD14 4.1kW in Portable Air will assist with your enquiry and arrange to have instruction manual sent to you. Omega altise APC14 Pdf User Manuals. View online or download Omega altise APC14 User Manual,,,,.

<http://eco-region31.ru/3rd-generation-ipod-nano-manual>