

## Diehard 10 Amp Manual Battery Charger Instructions

---



**File Name:** Diehard 10 Amp Manual Battery Charger Instructions.pdf

**Size:** 3170 KB

**Type:** PDF, ePub, eBook

**Category:** Book

**Uploaded:** 11 May 2019, 13:27 PM

**Rating:** 4.6/5 from 590 votes.

**Status:** AVAILABLE

Last checked: 19 Minutes ago!

**In order to read or download Diehard 10 Amp Manual Battery Charger Instructions ebook, you need to create a FREE account.**

[\*\*Download Now!\*\*](#)

eBook includes PDF, ePub and Kindle version

[Register a free 1 month Trial Account.](#)

[Download as many books as you like \(Personal use\)](#)

[Cancel the membership at any time if not satisfied.](#)

[Join Over 80000 Happy Readers](#)

### Book Descriptions:

We have made it easy for you to find a PDF Ebooks without any digging. And by having access to our ebooks online or by storing it on your computer, you have convenient answers with Diehard 10 Amp Manual Battery Charger Instructions . To get started finding Diehard 10 Amp Manual Battery Charger Instructions , you are right to find our website which has a comprehensive collection of manuals listed.

Our library is the biggest of these that have literally hundreds of thousands of different products represented.



## Book Descriptions:

# Diehard 10 Amp Manual Battery Charger Instructions

It takes longer, but is simple and requires only an AC outlet. Always make sure that the charger is designed to work with your battery's voltage. Most cars use a 12-volt battery. Step 1 Set the battery charger to the correct voltage, usually 12 volts for a car. Step 2 Switch the output selector to the desired number of amps. The lower the number of amps, the longer it takes to charge. Step 3 Attach the positive battery charger clamp to the positive post first for batteries that are negative-grounded, as most car batteries are. Attach the negative battery charger clamp to the negative post. Plug the battery charger into a grounded outlet. Charge the battery until the ammeter needle indicates that the battery is charged. Unplug the charger when the ammeter indicates a full charge. Remove the clamps, negative first. Most car batteries take between two and three hours to charge at 10 amps. Warnings Do not allow the battery to overcharge. If you need to use an extension cord, use only a heavy-duty three-pronged type. Turn your head when connecting and disconnecting clamps, in case of a spark. About the Author This article was written by the It Still Works team, copy edited and fact checked through a multipoint auditing system, in efforts to ensure our readers only receive the best information. To submit your questions or ideas, or to simply learn more about It Still Works, contact us. More Articles Schumacher SE1052 User Instructions How to Set a Clock on an Oldsmobile. How to Enter a BMW Radio Code How to Reset the Maintenance Light on a. How to Reset the Radio After a Battery. How to Calculate Rotational Torque How to Reset the Oil Change Light in a. What Is the Average Gas Mileage for a. Page Count 15 Fully Automatic GFCI Outlets. Model No. Instructions, Sears, Roebuck Estates, Warranty. Please read this Manual before using your Battery Charger This manual Please read and follow these instructions and For information about troubleshooting. Time Monday through Friday. <http://www.time.net.pl/userfiles/brother-p-touch-pt-8000-manual.xml>

- **1.0.**

Warranty Sears, Roebuck and Co. Hoffman Estates, IL 60179 Safety instructions This charger is not intended to supply power to a Help us help Remember If battery fluid These batteries may burst and cause personal Take it to a Personal. Safety. Precautions. For your own personal safety, please follow the A battery can Batteries generate explosive gases. This section shows an illustration of your battery charger. Use it to become familiar with where all the parts are Replacement Parts List DieHard 71234 Rocker Switch SPST Circuit Breaker Assembly It is important to prepare your charger for use. This section will tell you how to assemble the charger, ground Assembling It is important to fully assemble your charger before use. Follow these instructions for easy assembly. Two wheels. Hammer. One axle. Phillips screwdriver. Two axle caps. Two axle brackets. One handle. One handle grip. One mounting foot. Attach Foot. Remove charger from packing materials and place Axle Assembly. Hold axle upright on floor or work surface. Then, using Be sure to tap the hub on Place the charger on its side. Place one end of each Turn the charger right side up onto its foot and wheels. Remove the two top screws from each side of the Plugging Electrical. Shock Hazard. Be sure that power cord fits properly into outlet. If not, have a qualified technician install a proper Your charger should be grounded Your charger is equipped with an electrical cord that A 3-Prong Grounded Wall Outlet. Proper grounding is required for correct GFCI operation. Circuit Interrupter outlets located on its back. The Ground fault circuit interrupters GFCI can help The GFCI must be tested before each use. To test The nightlight or other Using an extension. The light or other Call Customer. Service at 1800 SEARS 64 1800 732 7764. <http://www.yaoshun.com.hk/Images/image/brother-p-touch-pt-90-manual.xml>

The power cord must be plugged into a 3prongGround fault circuit interruptersIf you are charging a battery, the GFCI outlet shouldThe GFCI outlet should not be used while theIf using both GFCI outlets at the same time, theButtonThe use of an extension cord is not recommended. IfMake sure the pins on the plug of the extension cordUse only 3conductor grounded extension cordCheck that the extension cord is properly wired andPreparingWire Gauge to be sure that wire size is largeLength of Cord, in FeetIt is important that you read and follow these guidelines while you are preparing to charge your battery. Make sure that you have a 12 volt or 6 volt leadacidBe careful to keepIf you have a battery with removable cell caps, ifIf you have aContinue to the next step listed below. Take time to read all battery manufacturers specificBe sure that the area around the battery is wellIf ventilation isIf it is necessary to remove the battery from theA spark may beNOTE A marine battery installed in a boat must beYour BatteryFor best results from your battery charger, learn to use it properly. This section tells how to set the controls,SettingAll the controls for your charger are located on theMANUAL charge and the rate at which you want toAUTO pad and either the 2, 20, or 60 AMP Charge. Rate Selector pad. Charging will start after a shortWhile charging, the METER will show batteryMANUAL. Select a charge rate and time. TheWhile charging, the. METER will show battery voltage. To see how muchTiME pad. The METER will show the time and, afterMANUAL mode and have selected a charge rate. Touch the TIME pad until the desired time shows onMaximum. TimeIncrement. SettingsThen proceed as if youve just turned on theMETER will display battery voltage. Touch theTESTER pad. The METER will show the voltage ofMANUAL, and ENGINE START in that order.

WaitThe ENGINE STARTCrank the engine for no more than 5 seconds, if itCAUTION DO NOT try to crank an engineYou may damage theDieHardTimer modeToo high a charging rate; lower rateCharging. Your Battery. NOTE A marine boat battery must be removedTo charge it on board requiresChargingArrange the power cord and charging leadsKeep hands, hair, clothing and jewelry clear of theCheck the polarity of the battery posts using the. Identify which battery post is grounded or connected to the chassis.Connect the red POSITIVE charger clamp to theTo charge a positive grounded post system. Connect the black NEGATIVE charger clamp toIMPORTANT Wear safety glasses and face awayTwist or rock clamps back and forth to make aMake sure the POWER switch is set to the OFFAtthe2Ampchargingrate,the METERwillPOWER switch to the OFF position and unplugMake sure the POWER switch is set to the OFFAC outlet. For automatic charging, touch AUTO then aFor manual charging touch a charge rate pad thenIf more thanRefer to the. In the MANUAL mode at the 60Amp chargingAt the 2Amp charging rate, the METER will show a chargeTO AVOID OVERCHARGING in the Manual. Mode, monitor the METER frequently. When the battery is fully charged, turn the. POWER switch to the OFF position and unplugStand away from battery and remove the chargerClean and store the battery charger in a dryNOTE A marine boat battery must be removed andCheck the polarity of the battery posts as indicatedConnect the red POSITIVE charger clamp to the. POSITIVE post of the battery. Be sure to rock theAttach at least a 6gauge AWG insulated batteryNEGATIVE battery post. This cable will provide aStanding as far away from the battery as possible,Rock the clamp toNegative. PositiveThe Chart Method. Reserve Capacity RC. Use the following table to more accurately determineFirst, identify where your battery fits into the chart. NR means that the charger setting is NOT RECOMMENDED.

<https://labroclub.ru/blog/bose-lifestyle-38-owners-manual>

Find your battery's rating on the chart below and noteBatteries in cars and smaller trucks are usually ratedMotorcycle, gardenMethod. To find the time needed to fully charge your battery,The followingMultiply the result by 1.25 and you'll have the timeAdd one additional hour for a deepcycle battery.Charger SettingWhen you know the percent of charge and the Amp. Hour AH rating of your battery, you can calculate theReserve Capacity by 2, and add 16. You would need to charge your 100Ampere Hour. Battery for a little more than 3 hours at the 20AmpYour battery charger can be

used to jumpstart your Follow these instructions when METER display will show MAN manual mode. RDY. The charger is now ready to have the engine Maintenance After the engine starts, unplug the charger power Then move the POWER Important. Do not try to start the engine without a battery in it. You could cause damage to the electrical system. If the engine does turn over, but never starts up, there STOP cranking the engine until the other problem has NOTE The GFCI outlet should not be used while the. Charger is in the Engine Start Mode. A minimal amount of care can keep your battery This will help prevent Please read through this table for a Display. Clamps are not making a Check for poor connections at battery and frame. Make No reading on Check power cord and extension cord for loose fitting No power at receptacle. Check for open fuse or circuit breaker supplying AC outlet. In MANUAL Mode, Shorted battery clamps. Shorted battery. Circuit breaker cycles when current draw is too high. Check for shorted cables and replace if needed. Have a Sears Service Center test the battery. Charger leads reversed. Correct connections. Charger set at the START Correct touchpad settings. Drawing more than 275 Crank time varies with the amount of current drawn. If Failure to wait for 3 Wait until the METER displays RDY. Extension cord too long. Use shorter or heavier gauge extension cord.

<http://echoploda.com/images/Deldot-Bridge-Manual.pdf>

Weak cell or sulfated Sulfated battery will eventually take a normal charge if Battery is only partially Continue to charge battery. Charger makes a loud Transformer laminations Continue charging. Buzz is not abnormal. METER reading stays Battery severely Continue charging battery for two more hours. If Wrong battery voltage Make sure BATTERY Voltage Select switch is in proper The chargers AC power Make sure the chargers power cord or extension cord is Devices exceed 15 amps Check for open blown fuse or circuit breaker supplying. AC wall outlet. Short start cycle when Meter reads less A 120V device plugged U.S.A. 7 am to 430 pm Central Time Monday through Friday. File Type Extension pdf. PDF Version 1.2. Linearized No. Page Count 15. Page Layout SinglePage. Page Mode UseNone. Producer Goby Monitor Application version 4, 0, 0, 13. Create Date Fri Aug 24 042008 2012. Author. Title. Subject.

<https://www.fhccu.com/images/Delcos-3100-User-Manual.pdf>

<http://www.bosport.be/newsletter/bose-lifestyle-38-owners-manual>