

Dodge Avenger 2008 Manual



File Name: Dodge Avenger 2008 Manual.pdf

Size: 2901 KB

Type: PDF, ePub, eBook

Category: Book

Uploaded: 17 May 2019, 12:22 PM

Rating: 4.6/5 from 781 votes.

Status: AVAILABLE

Last checked: 12 Minutes ago!

In order to read or download Dodge Avenger 2008 Manual ebook, you need to create a FREE account.

[**Download Now!**](#)

eBook includes PDF, ePub and Kindle version

[Register a free 1 month Trial Account.](#)

[Download as many books as you like \(Personal use\)](#)

[Cancel the membership at any time if not satisfied.](#)

[Join Over 80000 Happy Readers](#)

Book Descriptions:

We have made it easy for you to find a PDF Ebooks without any digging. And by having access to our ebooks online or by storing it on your computer, you have convenient answers with Dodge Avenger 2008 Manual . To get started finding Dodge Avenger 2008 Manual , you are right to find our website which has a comprehensive collection of manuals listed.

Our library is the biggest of these that have literally hundreds of thousands of different products represented.



Book Descriptions:

Dodge Avenger 2008 Manual

Ride with a designated nondrinking driver, call a cab, a friend, or use public transportation. This manual illustrates and describes the operation of features and equipment that are either standard or optional on this vehicle. It also contains CAUTIONS against procedures that could result in damage to your vehicle. If you do not read this entire manual you may miss important information. Observe all Warnings and Cautions. These numbers can be used to order your dealer for these numbers and keep them in a safe place. IGNITION KEY REMOVAL Automatic Transaxle Place the shift lever in PARK. You can insert manual for door lock lubrication. If the light remains on after the bulb check, it indicates that there is a problem with the electronics. In addition, if the light begins to flash after the bulb check, it indicates that someone used an invalid key to try to start the engine. Keep the PIN in a secure location. This number is required for authorized dealer replacement of keys. Turn the ignition switch to the LOCK position and remove the second service to be reprogrammed. General Information The Sentry Key system complies with FCC rules Part 15 and with RSS210 of Industry Canada. Then the exterior lights will flash for another 15 minutes. After 16 seconds, the Vehicle Security Light will flash slowly. This shows that the system is fully armed. The Vehicle Security Alarm system is designed to protect your vehicle; however, you can create conditions where the system will give you a false alarm. The lights will fade to off after about 30 seconds or they will immediately fade to off once the ignition switch is turned on. REMOTE KEYLESS ENTRY IF EQUIPPED This system allows you to lock or unlock the doors, open the trunk, or activate the PANIC alarm from distances a maximum of 66 ft 20 m using a handheld radio transmitter. The turn signal lights will flash to acknowledge the unlock signal. <http://edu-soft.ru/site/htmlimages/carrier-58sta-owners-manual.xml>

- **dodge avenger 2008 manual, dodge avenger 2008 manual de usuario, dodge avenger 2008 owners manual, 2008 dodge avenger repair manual pdf free, 2008 dodge avenger repair manual pdf, dodge avenger 2008 fuse box manual, 2008 dodge avenger service manual pdf, 2008 dodge avenger repair manual, dodge avenger 2008 manual, dodge avenger 2008 manual, dodge avenger 2008 manual online, dodge avenger 2008 manual online, dodge avenger 2008 manual, dodge avenger 2009 manual, manual for 2008 dodge avenger, owners manual 2008 dodge avenger, dodge avenger 2008 repair manual, 2008 dodge avenger owners manual online, 2008 dodge avenger owners manual pdf.**

When the PANIC alarm is on, the headlights and park lights will flash, the horn will pulse on and off, and the illuminated entry system if equipped will turn on. Make sure not to damage the seal during removal. Separating Transmitter Halves Avoid touching the new batteries with your fingers. Skin oils may cause battery deterioration. NOTE Changes or modifications not expressly approved by the party responsible for compliance could void the users authority to operate the equipment. The vehicle must be locked, the deck lid and hood closed and the transmission gear selector lever in PARK in order to start the engine using the Remote Start button on the key fob. Remote Start. Then, within 15 minutes, insert to drive the vehicle. To Turn Off The Engine While In Remote Start Mode Press and release the valid remote start request. Dont leave the keys in the ignition. A child could operate power windows, other controls, or move the vehicle. Always remove the key from the ignition and lock all of the doors when leaving the vehicle unattended. POWER DOOR LOCKS A door lock switch is located on the driver and passenger door panel. Press this switch to lock or unlock the doors. Insert the tip of the the lock or unlock position as indicated by the stamped icons. Child Lock Control Auto Power Window Switch To disable the window controls on the other doors, press the

window lock button. To enable the window controls, press the window control button again. TRUNK RELEASE From inside the car the trunk lid can be released by depressing the Trunk Release Button located on the instrument panel to the left Entry RKE transmitter two times. Interior Trunk Emergency Release. NOTE The front airbags have a multi stage inflator design. Seat belts are designed to go around the large bones of your body. The lap portion could ride too high on your body, possibly causing internal injuries. A belt worn under the arm can cause internal injuries. <http://1worldlanguage.com/1worldlanguage/userfiles/carrier-58ssc110-manual.xml>

Inspect the belt system periodically, checking for cuts, frays, or loose parts. Damaged parts must be replaced immediately. Do not disassemble or modify the system. Push anchorage button to release the anchorage, and move it up or down to the position that serves you best. Adjustable Anchorage However, the belt will still retract to remove any slack in the shoulder belt. The Automatic wear the lap part of the belt across the thighs and as snug across the hips as possible. The words SRS AIRBAG are embossed on the airbag covers. Only use when the lap belt is not long enough when it is worn low and snug, and in the recommended seating positions. NOTE Airbag covers may not be obvious in the interior trim; but they will open to allow airbag deployment. Front Airbag Components When the bag deploys, it opens the seam between the front and side of the seats trim cover. Each airbag features inflated chambers placed adjacent to the head of each outboard occupant that reduce the potential for side impact head injuries. The curtains deploy downward, covering both windows on the impact side. You may damage the airbags and you could be injured because the airbags are not there to protect you. However, even in collisions where the airbags work, you need the seat belts to keep you in the right position for the airbags to do the job. See the section on Child Restraint. Phone numbers are provided under If You Need Assistance in Section 9 of this manual. After the self-check, the Airbag Warning Light will turn off. If the ORC detects a malfunction in any part of the system, it turns on the Airbag Warning Light either momentarily or continuously. A single chime will sound if the light comes on again after initial start up. The airbags may not be ready to inflate for your protection. Promptly check fuse block for blown fuses. Always check the child seat owners manual to ensure you have the correct seat for your forward-facing in the vehicle. An airbag deployment could cause severe injury or death.

Some booster seats are equipped with a front shield and are held in the vehicle by the lap portion. This should stow the seat belt follow the installation instructions that were provided with the child restraint system. Remind all children in the vehicle that the seat belts are not toys and should not be played with, and never where you are placing the child restraint. ATether Strap Hook BTether Anchor. Oil changes should be consistent with anticipated climate conditions under which vehicle operations will occur. For the recommended viscosity and quality grades, refer to. Airbag Light The light should come on and remain on for six to eight seconds as a bulb check when the ignition switch is first turned ON. Check turn signal and high beam indicator lights on the instrument panel. Fluid Leaks Check area under vehicle after overnight parking for fuel, engine coolant, oil, or other fluid leaks. Annoying headlight glare can be reduced by moving the small control under the mirror to the night position toward rear of vehicle. Apply the solution onto a clean cloth and wipe the mirror clean. ELECTRIC REMOTE CONTROL MIRRORS Both of the outside mirrors can be adjusted by using the remote controls mounted on the drivers door panel. Mirror Directions. After selecting a mirror, move the knob in the same direction you want the mirror to move. ILLUMINATED VANITY MIRRORS IF EQUIPPED down and swing the mirror cover upward. The lights will turn on automatically. Closing the mirror cover turns off the lights. See the UConnect website for supported phones. Cancel Command At any prompt, after the beep, you can say Manual. The UConnect website may also provide detailed instructions for pairing. For example, if your cellular service plan provides threeway calling, this feature can be accessed through the UConnect system. Call followed by the phone number or phonebook entry you wish to call. The first call will be on hold while the second call is in progress.

<http://www.statcardsports.com/node/9503>

To go back to the first call, refer to Toggling Between Calls in this section. If the phone is not say Emergency and the UConnect system will instruct the paired cellular phone to call the emergency number. You can use your UConnect system to access a voice mail system or an automated service, such as a paging service or automated customer service line. Some services require immediate response selection. Phone and Network Status Indicators If display such as the instrument panel cluster, and supported by your cell phone, the UConnect system will given for roaming, network signal strength, phone battery strength, etc. Voice Commands Alternates. Voice Commands Primary Alternates call cancel confirmation prompts continue delete dial download edit emergency English erase all Espanol Francais help home. Voice Commands AlternatesAt any point, if the system does not available at all times. Local commands are available if the supported radio mode is active. For best results, the Voice Training session should be completed when the vehicle is parked, engine running, all windows closed, and the blower fan switched OFF. This procedure may be repeated with a new user. Pull the bar up to move the seat to the desired position. Manual Seat Adjusting Bar. A lever with a ratcheting mechanism, located on the outboard side of the seat, raises and lowers it. Total travel is 2.2 in. 56 mm. Reclining Bucket Seats The recliner control is on the side of the seat. Use the recliner only when the vehicle is parked. Lumbar Support If Equipped This feature allows you to increase or decrease the amount of lumbar support. There are indicator lights in the switches, which indicate a low heat setting one light lit or high heat setting two lights lit. To raise, pull up on the head restraint. To lower, depress the button on the post guide and push down on the head restraint. FOLDING REAR SEAT To provide additional storage area, the rear seatback can be folded forward.

Pull on the loops shown in the picture to fold down either or both seatbacks. TO OPEN AND CLOSE THE HOOD To open the hood, two latches must be released. First pull the hood release lever located under the left side of the instrument panel. Use the hood prop rod to secure the hood the hood. Before closing the hood, make sure to stow the prop rod in its proper location. To prevent possible damage, do not slam the hood to close it. They will not turn off automatically. Interior lighting also comes on when a door is opened or the dimmer control is turned fully upward, past the second detent. Interior Dome Lamp. There is a second light located midway back in the headliner. MULTIFUNCTION CONTROL LEVER The MultiFunction Control Lever controls the operation of the headlights, parking lights, turn signals, headlight beam selection, instrument panel light dimming, interior lights, the passing lights, and fog lights. You can signal a lane change by moving the lever partially up or down without moving beyond the detent. NOTE The front fog lights will only operate with the headlights on low beam. If an indicator fails to light when the lever is moved, it would suggest that the fuse or indicator bulb is defective. Damage to the windshield wipers may result if the wiper control is left in any position other than Always remove any buildup of snow that prevents the windshield wiper blades from returning to the OFF position. INTERMITTENT WIPER SYSTEM Use the intermittent wiper system when weather conditions make a single wiping cycle with a variable pause between cycles desirable. It also allows you to lengthen or shorten the steering column. The Speed Control indicator in the instrument cluster will illuminate. To Deactivate A soft tap on the brake pedal, pulling the speed control lever toward you CANCEL, or normal brake pressure while slowing the vehicle will deactivate speed control without erasing the set speed memory.

Your vehicle could go too fast for the conditions, and you could lose control. An accident could be the result. Dont use Speed Control in heavy traffic or on roads that are winding, icy, snowcovered, or slippery. To do this, press and hold the two outside buttons for 20 seconds until the red indicator flashes. Watch for the HomeLink indicator to change flash rates. When it changes, it is

programmed. The indicator light will flash slowly and then rapidly when fully trained. Power Sunroof Switch This is called Express Open. During Express Open operation, any movement of the sunroof switch will stop the sunroof. Closing Sunroof Manually To close the sunroof from an open or vent position, press and hold the switch forward. SUNSHADE OPERATION The sunshade can be opened manually. Both of the outlets are protected by a fuse. The instrument panel power outlet, located below the climate control knobs, has power available only when the ignition is on. The optional ash receiver also comes with a cigar lighter. DUAL STORAGE BINS Lifting a latch at the front of the hinged armrest provides access to these storage areas. Console Compartment Features. NOTE A notch in the side of the console base under the armrest will also allow use of cell phone while still plugged power outlet located inside the console can also energize the cigar lighter in the available Smokers Package. When the unit is on and the LED located between the cup holders is Red, the cup holder is being heated. When the LED is Blue, the cup holder is being cooled. Video Console. Rear Bottle Holders There are builtin bottle holders located in both rear door trim panels. This will prevent cool air from entering the passenger compartment when in heat mode. If your air conditioning is on, turn it off. Obtain SERVICE IMMEDIATELY. See your authorized dealer. 7. Airbag Light The light comes on and remains on for 6 to 8 seconds as a bulb check when the ignition switch is first turned ON. If the light does not.

If the light comes on and remains on while driving, stop the vehicle and shut off the engine. See your authorized dealer service center as soon as possible. Change Oil Your vehicle is equipped with an engine oil change indicator system. If a problem is detected, the light will come on while the engine is running. If the light remains lit with the engine running your vehicle will usually be drivable and not need towing, however see your dealer for service as soon as possible. The light should go out with the engine running. If the light remains on problem diagnosed and corrected. Certain conditions such as a loose or missing gas cap, poor fuel quality, etc. The ABS warning light should be checked frequently to assure that it is operating properly. Turn the ignition key to the on position, but do not start the vehicle. The light should come on. The vehicle should have service performed, and the brake fluid level checked. If brake failure is indicated, immediate repair is necessary. NOTE This light shows only that the parking brake is applied. It does not show the degree of brake application. 29. Electronic Vehicle Information Center EVIC Display Premium Cluster Only This display shows the EVIC messages when the appropriate conditions exist. It is located in the lower left part of the cluster below the fuel and engine temperature gauges. The engine oil change indicator system is duty cycle based, which means the engine oil change interval may fluctuate dependent upon your personal driving style. Then, the history information This estimated distance is determined by a weighted average of the instantaneous and average fuel 48 km estimated driving distance, the DTE display will change to a text display of LOW FUEL. However, prior to calibrating the compass, make sure the proper information. This is where the compass sensor is located. To make your selection, press and release the RESET button until ON or OFF appears.

NOTE Turning the headlights on during the daytime causes the instrument panel lights to dim. Like any system, however, automotive mainly affect the wave amplitude, and thus remain a part of the AM reception. RES Radio NonSatellite Model Shown With Satellite Similar. Electronic Volume Control The electronic volume control turns continuously 360 degrees in either direction without stopping. This feature operates in either AM or FM frequencies. Personality Public Rhythm and Blues Religious Music Religious Talk Rock Soft Soft Rock Soft Rhythm and Blues. Operation Instructions CD MODE for CD and MP3 Audio Play NOTE The ignition switch must be in the ON or ACC position to operate the radio. If you have ejected a disc and have not removed it within 10 seconds, it will be reloaded. If the CD is not removed, the radio will reinsert the CD but will not play it. TIME Button Press this button to change the display from a large CD playing time display to a small CD playing the selections on the compact disc in random order to provide an interesting change of pace. UDF and Apple HFS formats are not supported. The time of day will display for five

seconds when ignition is OFF. Operating Instructions Radio Mode NOTE The ignition switch must be in the ON or ACC position to operate the radio. This feature operates in AM, FM or Satellite if equipped frequencies. Many radio stations do not currently broadcast Music Type information. You can select a language not listed by scrolling down and selecting other. AutoPlay control to select desired title to play. NOTE The user will have to set these defaults before loading a disc. If changes are made to these settings after a disc is loaded, changes will not be effective. Customers may take their vehicle to an authorized dealer to change the region code of the player a maximum of five times. TIME Button CD MODE Press this button to change the display from a large CD playing time display to a small CD playing time display.

CAUTION move to the entrance for easy removal. ID3 version 2 is not supported by the radios. Playlist files are not supported. MP3 Pro files are not supported. Operation Instructions Auxiliary Mode The auxiliary AUX jack vehicle speakers. Operating Instructions Voice Recognition Mode Press the TIME button to change the display from elapsed playing time. Refer to your radiospecific users manual for detailed operating instructions. Operating Instructions Satellite Radio If Equipped Refer to your Radiospecific users manual for detailed operating instructions. Changing the Time Zone 1. Turn on is displayed. This makes the systems clock very accurate once the appropriate time zone and daylight savings information is set. Changing the Time Zone 1. Turn on the multimedia system. 2. Touch the screen where the time is displayed. Controlling The iPod Using Radio Buttons To get into the UCI iPod mode be in Play mode. Pressing and releasing the FF button will go forward five seconds of the current track. SEEK Buttons Use the SEEK buttons to move to the previous or the next track. List or Browse Mode During Play mode, pressing any of the following buttons will take you to List mode. List mode enables you to scroll through the list of menus and tracks on the iPod device. The subscription service provider is Sirius Satellite Radio. Sirius ID number will display. The Sirius ID number display will time out in two minutes. This number is used to activate, deactivate, or change the Sirius subscription. Remote Sound Controls This button does not function LCD screen integrated into the center console armrest. The screen features brightness control for optimum daytime and nighttime viewing. VES Video Screen. RADIO OPERATION AND CELLULAR PHONES Under certain conditions antenna. This condition is not harmful to the radio. CLIMATE CONTROLS The Air Conditioning and Heating System is designed to make you comfortable in all types of weather. Manual Air Conditioning and Heating System.

The blue area of the scale indicates cooler temperatures while the red area indicates warmer temperatures. This setting works best in cold or snowy conditions that require extra heat to the windshield. Air Conditioning Control Use this button to engage the Air Conditioning. Then, move the temperature control to the desired temperature. Automatic Temperature Control ATC If Equipped. The controls on the climate control provide the air recirculation. This maintains a comfortable temperature even under changing conditions. Vacation Storage Anytime you store your vehicle, or keep it out of service i.e., vacation for two weeks or more, run the air conditioning system at idle for about five minutes in the fresh air and high blower settings. The filter acts on air coming from outside the vehicle and recirculated air within the passenger compartment. Control Setting Suggestions for Various Weather Conditions. REAR WINDOW FEATURES Electric Rear Window Defroster If Equipped The electric Rear Window Defroster Control is located on the climate control. Press this button to turn on the rear window defroster and the heated side mirrors if equipped. Make sure all occupants have securely fastened their seat belts. Apply the brakes before shifting to any driving gear. If the vehicle has a discharged battery, booster cables may be used to obtain a start from another vehicle. This type of start can be dangerous if done improperly, so follow the procedure carefully. See section 6 of this manual for jump starting instructions. The system has a targeted range of 328 ft 100 m. The vehicle must be locked, the deck lid and hood closed and the transmission in PARK in order to start the engine using the Remote Start button on the key fob. NOTE The engine can be started two consecutive times two 15 minute cycles by using the key fob.

ENGINE BLOCK HEATER IF EQUIPPED The engine block heater warms engine coolant and permits quicker starts in cold weather.

Gear Selector Lever NEUTRAL Engine may be started in this range. These are unsafe practices that limit your response to changing traffic or road conditions.

LOW 4 Speed Transaxle This range should be used for engine braking when descending very steep grades. This is done to prevent transaxle damage due to overheating.

Reset Mode Electronic Transaxle The transaxle is monitored electronically for abnormal conditions. If a condition dealer for service without damaging the transaxle.

AutoStick allows you to maximize engine braking, eliminate undesirable upshifts and downshifts, and improve overall vehicle performance.

ALL WHEEL DRIVE IF EQUIPPED This feature provides full time, on demand, All Wheel Drive AWD. The system is automatic with no driver inputs or additional driving skills required.

PARKING BRAKE When the parking brake is applied with the ignition on, the Brake Light in the instrument cluster will come on. Failure to do so can lead to brake failure and an accident. It will take you longer to stop the vehicle or will make your vehicle harder to control. You could have an accident. If the ABS light is on, the brake system should be serviced as soon as possible to restore the benefits of AntiLock brakes. The system controls hydraulic brake pressure to prevent wheel lockup and Be sure to adapt your speed and driving to the prevailing road conditions.

All other stability features of ESP function normally, with the exception of engine power reduction. This mode is intended to be used if the vehicle is in deep snow, sand. If this light have the problem diagnosed and corrected. Under these conditions, you will observe a substantial increase in that there is a problem with the power steering system. Upon initial startup in cold weather, the power steering safety risk to yourself and others. Look for the TIN on the outboard side of black sidewall tires as mounted on the vehicle.

Tire Loading and Tire Pressure Tire Placard Location NOTE The proper cold tire inflation pressure is listed on either the face of the drivers door or the drivers side B Pillar. Tire and Loading Information Placard Under inflation, also Inflation Pressures The proper cold tire inflation pressure is condition. Tire Placard Location. Keep this in mind when checking tire pressure inside a garage, especially in the winter. Where speed limits or conditions are such that the vehicle can be driven at high speeds, or an authorized tire dealer for recommended safe operating speeds, loading and cold tire inflation pressures.

Radial Ply Tires Since this tire has limited tread life, the original tire should be repaired or replaced and reinstalled at the first opportunity. Failure to follow this warning can result in sudden tire failure. This can cause unpredictable handling and stress to steering and suspension components. Alignment will not correct this condition. See your dealer for proper diagnosis. Improper alignment will wear. For these reasons, they wear at unequal rates and tend to develop irregular wear patterns. Tire pressure should always be set based on cold inflation tire pressure. Aftermarket wheels can cause sensor damage. The Tire Pressure Monitoring Telltale Light will turn off when the fault condition no longer exists. Sensors, mounted to each wheel as part of the valve stem, transmit tire pressure readings to the Receiver Module. If the system fault no longer exists, the Tire Pressure Monitoring Telltale Light will no longer flash, and the CHECK TPM SYSTEM message will no longer display, and a pressure value will display in place of the dashes. A system fault can occur due to any of the following. Under normal conditions, the use of premium gasoline will Light spark knock at low engine speeds is not harmful to your engine. However, continued heavy spark knock at high speeds can cause damage and immediate service is required.

The manufacturer supports the use of reformulated gasolines. Properly of these blends may result in starting and driveability problems and may damage critical fuel system components. Therefore, you should not have to add anything to the fuel. Have any abnormal conditions repaired promptly. Until repaired, drive with all the vehicle.

FLEXIBLE FUEL 2.7L ENGINES ONLY EXCEPT CALIFORNIA EMISSION STATES E85 covers those subjects that are unique to these vehicles. Never have any smoking materials lit in or near the vehicle when removing the fuel filler tube cap gas cap or filling

the tank. For best results, a refueling pattern that alternates between E85 and unleaded gasoline should be avoided. When engine oils. These special requirements are included in Mopar engine oils, and in equivalent oils meeting Chrysler Specification MS6395. CRUISING RANGE Because E85 fuel contains less energy per gallon than gasoline, you will experience an increase in fuel consumption. You can expect your fuel economy and driving range to decrease by about 30% compared to gasoline operation. The gas cap is behind the fuel filler door, on the left rear quarter panel of the vehicle. If the gas cap is lost or damaged, be sure the replacement cap is for use with this vehicle. Fuel Filler Door. Fuel Filler Door Features This is that the gas cap is tightened properly. The Malfunction Indicator Light in the instrument cluster may turn on if the gas cap. If the seatbacks are folded for carrying cargo, do not exceed the specified GVWR and GAWR. Gross Vehicle Weight Rating GVWR The GVWR is the total allowable weight or rear GAWR. A dangerous driving condition can result if either rating is exceeded. Improper weight distribution can have an adverse effect on the way your vehicle steers and handles and the way the brakes operate. A loaded vehicle is shown in the illustration. The recommended way to measure GTW is to put your fully loaded trailer on a vehicle scale.

Frontal Area Frontal Area is the maximum height and maximum width of the front of a trailer and its cargo. Trailer Hitch Classification Definitions Class Max. Never exceed the maximum trailer tongue weight stamped on your bumper or trailer hitch. Refer to the Tire and Loading Information placard in the Tire Safety Information Section of this manual for the maximum combined weight of occupants and cargo for your vehicle. You could lose control of your vehicle and have an cause a loss of control, poor performance, or damage to brakes, axle, engine, transaxle, steering, parked on a grade. When parking, apply the parking brake on the tow vehicle. Replacing tires with a higher load carrying capacity will not increase the vehicles GVWR and GAWR limits. Towing any trailer will increase your stopping distance. When towing, you should allow for additional space between your vehicle and the vehicle in front of you. Failure to do so could result in an accident. Towing Tips Before setting out on a trip, practice turning, stopping, and backing the trailer in an area located away from heavy traffic. This action will also provide better engine braking. NOTE With extended use, the flasher may wear down your battery. IF YOUR ENGINE stop the vehicle with the engine at idle, when safe. If your air conditioner is on, turn it off. You may want to call a service center if your vehicle overheats. If you decide to look under the hood yourself, refer to Section 7, Maintenance, of this manual. Follow the warnings under the Cooling System Pressure Cap paragraph. Jack Location The jack and jackhandle are stowed under the load floor in the trunk. Spare Tire Stowage The compact spare tire is stowed under the load floor in the trunk. Spare Tire Removal Lift up the load floor cover and remove the hold down. Jacking Instructions It could slip off the jack and hurt someone near it. Alternate nuts, until each nut has been tightened twice. Correct wheel nut torque is 100 ft. Correct pressure as required.

<https://www.ziveknihy.sk/audiokniha/99-kodiak-400-manual>