


ZANUSSI

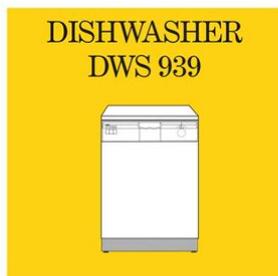

File Name: Dws-939 Manual.pdf

Size: 3218 KB

Type: PDF, ePub, eBook

Category: Book

Uploaded: 26 May 2019, 14:26 PM

Rating: 4.6/5 from 802 votes.

Status: AVAILABLE

Last checked: 10 Minutes ago!

In order to read or download Dws-939 Manual ebook, you need to create a FREE account.

[**Download Now!**](#)

152989 3371

INSTRUCTION BOOKLET



eBook includes PDF, ePub and Kindle version

[Register a free 1 month Trial Account.](#)

[Download as many books as you like \(Personal use\)](#)

[Cancel the membership at any time if not satisfied.](#)

[Join Over 80000 Happy Readers](#)

Book Descriptions:

We have made it easy for you to find a PDF Ebooks without any digging. And by having access to our ebooks online or by storing it on your computer, you have convenient answers with Dws-939 Manual . To get started finding Dws-939 Manual , you are right to find our website which has a comprehensive collection of manuals listed.

Our library is the biggest of these that have literally hundreds of thousands of different products represented.



Book Descriptions:

Dws-939 Manual

For the user For the installer. Important safety information 3 Installation instructions 20.
Description of the appliance 4 Water. Page 3 Important safety information. It is most important that this instruction book should be retained with the appliance for future. Page 4 Description of the appliance Before using your dishwasher for the first time Rinse aid is automatically added during the last rinse, The. Page 8 Using your appliance. Loading your appliance. Before placing dishes in the machine, remove any Page 9 The upper basket. The upper basket is designed for plates dessert Page 10 Use of detergent We recommend the use of Finish detergents which. Page 11 Hints and tips. To save energy Items not suitable for. Place dishes in the machine immediately after every dishwashers Type of load Degree of soil Starting position Recommended quantity Cycle Page 13 Operating sequence Page 14 Maintenance and cleaning. Internal cleaning. Ensure that the seals around the door, the detergent Page 15 External cleaning. Clean the external surfaces of the machine and If necessary use. Page 16 Something not working. Certain problems are due to lack of simple maintenance or oversights, which can be solved easily without. Page 17 If after all these checks, the problem persists, contact Standard guarantee conditions. We, Zanussi, undertake that if within 12 months of the date of purchase this Zanussi. Page 19 Hints for test centres. Before starting any test it is necessary to fill completely with salt the salt container and. Page 20 Installation instructions Page 21 Water outlet hose connection. The end of the drain hose can be connected in the If. Page 23 Adjusting the worktop. You can move the worktop forward or backward by 25. Please check your inbox, and if you can't find it, check your spam folder to make sure it didn't end up there. Please also check your spam folder. <http://giorgimpianti.com/userfiles/delonghi-room-air-conditioner-manual.xml>

- **dws-939 manual, ds939 manual, dw939 manual.**

Should the appliance be sold or transferred to another owner, or should you move house and leave the appliance, always ensure that the book is left with the appliance in order that the new owner can get to know the functioning of the appliance and the relevant safety information. You MUST read it carefully before installing or using the appliance. Care should be taken when moving it. Repairs carried out by inexperienced persons may cause injury or serious malfunctioning. Contact your local Service Force Centre. Always insist on genuine spare parts. Children should not be allowed to tamper with the controls or play with the product. Always turn off the appliance before opening the door. Your local Water Authority can advise you on the hardness of the water in your area. In this case adjust the water softener on level 1 without using salt. This will prevent any grains of salt or salty water, which may have been spilled, remaining on the bottom of the machine for any period of time, which may cause corrosion. A green float is clearly visible when there is salt inside the container, and almost disappears when the salt has finished reminding you to add salt. The dispenser, which is positioned inside the door, holds about 110 ml of rinse aid, which is sufficient for 16 40 dishwashing programmes, depending upon the dosage setting. The indicator B will be completely dark. Clean up any rinse aid spilt during filling with an absorbent cloth to avoid excess foaming during the next wash. Reduce it if there are sticky whitish streaks on the dishes. If the handles protrude from the bottom of the basket, obstructing the lower spray arm, load the cutlery with the handles facing upwards. To separate the two parts, slide them horizontally in opposite directions and pull them apart. To reassemble, reverse the procedure. Using the online preview, you can quickly view the contents and go to the page where you will find the solution to your problem with Zanussi DWS

To start viewing the user manual Zanussi DWS 939 on full screen, use the button Fullscreen. However, if you do not want to take up too much of your disk space, you can always download it in the future from ManualsBase. The option to print the manual has also been provided, and you can use it by clicking the link above Print the manual. You do not have to print the entire manual Zanussi DWS 939 but the selected pages only. paper. If you want to quickly view the content of pages found on the following pages of the manual, you can use them. Should the appliance be sold or transferred to another owner, or should you move house and leave the appliance, always ensure that the book is left with the appliance in order that the new owner can get to know the functioning of the appliance and the relevant safety information. This information has been provided in the interest of your safety. You MUST read it.

Central filter 11. Lower spray arm 6 9 12. Water hardness Setting the water softener Clarke PPM French Use of Level degrees Parts per degrees The dishwasher is equipped with a water softener salt All other types of salt not specifically designed for use in dishwasher, especially table salt, will damage the water softener. Only fill with salt just before starting one of the complete washing programmes not the Rinse and Hold programme. This will prevent any grains of salt or salty water, which may have been spilled, remaining on the bottom of the machine for any period of time, which may cause corrosion. The dispenser, which is positioned inside the door, holds about 110 ml of rinse aid, which is sufficient for 16 40 dishwashing programmes, depending upon the dosage setting. Filling with rinse aid 1. Open the container by turning the lid A anticlockwise. 2. Add the rinse aid until the container is completely full. The indicator B will be completely Do not load very small items which can fall through the baskets. Open the door and slide out the baskets to load the dishes.

UI22 The lower basket The lower basket is designed to take saucepans, lids, plates, salad bowls, cutlery etc. Serving dishes and large lids should be arranged around the edge of the basket, enArrange items on and underneath the folddown cup racks so that water can reach all surfaces. Glasses with long stems can be placed upside down in the raised cup racks. For taller items, the cup racks can be folded upwards. Light items plastic bowls etc. should be loaded in the US29 upper basket and arranged so they do not move. Before clWe recommend the use of Finish detergents which are available in the following options Finish Double Action Tablets. Each tablet has the exact amount of detergent required, simply place in the dispenser. Finish Powder recommended for every day use. If using powder detergents proceAt the end of the programme the Pull Regular use of Finish Dishwasher Cleaner cleans inaccessible parts, eliminates unpleasant food odours and helps prevent the buildup of limescale. Cleaning the central filter After each wash Scraps of food may accumulateIf necessary use only neutral detergents. Never use abrasive products, scouring pads or solvent acetone, trichloroethylene etc.. Prolonged periods of nonoperation If you are not using the machine for any period of time you are advised to 1. Unplug the appliance and then turn off the water. 2. Fill the rinse aid dispenser. 3. Leave the door ajar to prevent the formation of any unpleasanBefore contacting your local Service Force Centre, please carry out the checks listed below. Important If you call out an engineer to a fault listed below or to repair a fault caused by incorrect use or installation a charge will be made even if the appliance is in guarantee. Symptom Solution The machine will not start l The door has not been pThis information can be found on the rating plate located on the right hand side of the dishwasher door see picture. Prod.No.. Ser. No.. Mod..

RA01 Service and spare parts In the event of your appliance requiring service, or if you wish to purchase spare parts please contact your local Zanussi Service Force Centre by telephoning 08705 929929 YAny plumbing work required to install this appliance should be carried out by a qualified plumber or competent person. Remove all packaging before positioning the machine. If possible, position the machine next to a water tap and a drain. Water supply connections This dishwasher

must be plumbed into a cold water supply. The water pressure must. Manual and User Guide for many equipments like mobile phones, photo cameras, motherboard, monitors, software, tv, dvd, and others. Care should be taken when moving it. It is dangerous to alter the specifications or attempt to modify this product in any way. Care must be taken to ensure that the appliance does not stand on the electrical supply cable. Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person. Any plumbing work required to install this appliance should be carried out by a qualified plumber or competent person. Child Safety This appliance is designed to be operated by adults. Children should not be allowed to tamper with the controls or play with the product. Keep all packaging well away from children. Keep all detergents in a safe place out of children's reach. During Use Items that are contaminated by petrol, paint, steel or iron debris, corrosive, acidic or alkaline chemicals must not be washed in this dishwasher. Under no circumstances should you open the door whilst the appliance is in operation. Repairs carried out by inexperienced persons may cause injury or serious malfunctioning. Contact your local Service Force Centre. Always insist on genuine spare parts. Conservation In the interest of the environment. Materials marked with the symbol are recyclable.

Check with your local Council or Environmental Health Office to see if there are facilities in your area for recycling this appliance. When the appliance is to be scrapped, cut off the power supply cable and make the door closing device unusable to prevent young children from being trapped inside. Help to keep your country tidy use authorised disposal sites for your old appliance. A VV01en Important safety information It is most important that this instruction book should be retained with the appliance for future reference. Should the appliance be sold or transferred to another owner, or should you move house and leave the appliance, always ensure that the book is left with the appliance in order that the new owner can get to know the functioning of the appliance and the relevant safety information. This information has been provided in the interest of your safety. You MUST read it carefully before installing or using the appliance. Central filter 11. Lower spray arm 12. Upper spray arm 13. Setting the water softener The dishwasher is equipped with a water softener designed to remove minerals and salts from the water supply, which would have a detrimental or adverse effect on the operation of the appliance. The higher the content of these salts, the harder your water is. Water hardness is measured in equivalent scales, Clarke, French degrees and PPM parts per Million. The softener should be adjusted according to the hardness of the water in your area. Your local Water Authority can advise you on the hardness of the water in your area. The dishwasher is factory set at level 2. If this level is not suitable for your area the softener should be adjusted. To adjust the water softener With a screwdriver turn the selector on the upper front corner of the machine until the level required corresponds with the marker. In this case adjust the water softener on level 1 without using salt.

2 AA05 1 3 5 4 2 All other types of salt not specifically designed for use in dishwasher, especially table salt, will damage the water softener. Only fill with salt just before starting one of the complete washing programmes not the Rinse and Hold programme. This will prevent any grains of salt or salty water, which may have been spilled, remaining on the bottom of the machine for any period of time, which may cause corrosion. To fill 1. To fill with salt, unscrew the cap of the salt container. 2. Pour 1 litre of water inside the container this is necessary only before filling with salt for the first time. 3. Using the funnel provided, pour in the salt until the container is full. Do not worry if water overflows from the unit when filling with salt, this is quite normal. 4. Replace the cap making sure that there is no trace of salt on the screw thread or on the gasket. 5. Screw on the cap tightly. The salt container will require topping up periodically. The salt cap has a refill indicator window in the centre. A green float is clearly visible when there is salt inside the container, and almost disappears when the salt has finished reminding you to add salt. SAL02en SALE SAL T SALZ SEL SR06 SR1 1 The dispenser, which is positioned inside the door, holds about 110 ml of rinse aid, which is

sufficient for 16 40 dishwashing programmes, depending upon the dosage setting. Filling with rinse aid 1. Open the container by turning the lid A anticlockwise. 2. Add the rinse aid until the container is completely full. The indicator B will be completely dark. 3. Top up the rinse aid when the indicator B becomes clear. Ensure that the lid is closed after every refill. Do not put liquid detergent in the rinse aid department. Clean up any rinse aid spilt during filling with an absorbent cloth to avoid excess foaming during the next wash.

Adjusting the dose According to the finish and drying results obtained, adjust the dose of rinse aid by means of the 6 position selector C position 1 minimum dosage, position 6 maximum dosage. Start from position 3. Gradually increase the dose if there are drops of water or lime spots on the dishes after washing. Reduce it if there are sticky whitish streaks on the dishes. B R I 0 1 e n B R 0 1 A m a x 6 5 4 3 2 1 B B R 0 3 B R 0 2 C m a x 6 5 4 3 2 1 Do not load very small items which can fall through the baskets. Open the door and slide out the baskets to load the dishes. The lower basket The lower basket is designed to take saucepans, lids, plates, salad bowls, cutlery etc. Serving dishes and large lids should be arranged around the edge of the basket, ensuring that the upper spray arm can turn freely. The two rear rows of prongs on the lower basket can be easily lowered to allow you to load pots, pans and bowls. To lower the prongs Slightly pull them upward and let them drop down see picture. To bring them back to the standing position, just pull them up again. The cutlery basket Long bladed knives stored in an upright position are a potential hazard. These items should only be placed in the removable knife basket. Take care when loading or unloading sharp items such as knives. Cutlery should be placed in the removable cutlery basket with the handles facing downwards. If the handles protrude from the bottom of the basket, obstructing the lower spray arm, load the cutlery with the handles facing upwards. Mix spoons with other cutlery to prevent them from sticking together. The cutlery basket is in two parts which can be separated to give greater loading flexibility. To separate the two parts, slide them horizontally in opposite directions and pull them apart. To reassemble, reverse the procedure.

C E S 2 1 e n U s i n g y o u r a p p l i a n c e U I 2 2 U I 2 1 U I 1 8 U I 0 7 U I 5 3 Arrange items on and underneath the folded down cup racks so that water can reach all surfaces. Glasses with long stems can be placed upside down in the raised cup racks. For taller items, the cup racks can be folded upwards. Light items plastic bowls etc. should be loaded in the upper basket and arranged so they do not move. Before closing the door, ensure that the spray arms can rotate freely. Adjusting the height of the upper basket If washing very large plates over 27 cm and up to 31 cm in diameter you can load them in the lower basket after moving the upper basket to the higher position. To move to the higher position proceed as follows 1. Pull out the basket until it stops. 2. Carefully lift both sides upwards until the mechanism is engaged and the basket is stable. When the top basket is in the higher position it will only take plates up to 20 cm in diameter and you will not be able to use the raised cup racks. To lower the basket to the original position proceed as follows 1. Pull out the basket until it stops. 2. Carefully lift both sides upwards and allow the mechanism to drop back slowly, keeping hold of it. Never lift or lower the basket on one side only. After loading your machine always close the door, as an open door can be a hazard. C E S 1 6 e n U S 2 9 R C 0 4 Each tablet has the exact amount of detergent required, simply place in the dispenser. Finish Powder recommended for everyday use. Finish Liquid Gel ideal for everyday use. As the gel is extra gentle it is recommended for fine china. If using powder detergents proceed as follows 1. Open the dispenser lid by pulling the catch D. 2. Add the detergent according to the recommendations in the programme chart. As all detergents are not the same, you should also consult the instructions on the packet. 3. Always close the lid. 4.

If the programme has a pre wash add the required detergent over the lid of the dispenser. If using detergent in tablets proceed as follows 1. For all programmes; place 1 tablet inside the detergent dispenser. 2. Always close the lid. 3. For all programmes with pre wash; place a portion of a fur

ther tablet on the lid of the detergent dispenser. Insufficient quantities of detergent will produce poor washing results, whereas an excessive amount of detergent will not improve washing results and is also wasteful. Using no more than the correct amount also contributes to reducing pollution. These new compact powders are generally phosphate-free. This will avoid lime deposits on crockery and the inner tub. Do not prewash dishes under running water. For best washing and drying results before loading remove all scraps of food and soak very heavily soiled pots and pans. Arrange saucepans, cups and glasses etc. Avoid contact between the dishes as far as possible. Wait a few minutes before removing the dishes; in this way they will be cooler and the drying will be improved. Empty the lower basket first and then the upper one; this will avoid water dripping from the upper basket onto the dishes in the lower one. You will improve drying results by leaving the dishwasher door ajar for at least 1530 minutes as soon as the programme finishes. Items not suitable for dishwashers The following items should not be washed in the dishwasher unless they are sold as dishwasher proof Cutlery with wooden or horn handles or glued parts bronze cutlery saucepans with wooden handles aluminium ware crystal ware leaded glass plastic items antique or fine decorated china Certain types of decoration can discolour when washed in a dishwasher. Crystalware and plastic objects, if not guaranteed dishwasher proof should be washed by hand. Certain types of glass can also become opaque after being washed several times in a dishwasher.

A chemical reaction can occur between silver cutlery and stainless steel cutlery. As a precaution, do not wash together. Iron and cast iron objects can rust and stain other items. Aluminium tends to go black, copper, pewter and brass tend to stain. If in doubt check with manufacturer of the item. When buying new dishes, ensure that they are dishwasher proof. CON06en Hints and tips BRILLIANT FOR A SHINE RINSE CONCENTRATED DISHWASHER DETERGENT ACTION NEW DOUBLE LIQUID GEL POWDER EASY POURING PACK For best results we recommend the use of Finish detergents, rinse aid and salt. DE15 Close the detergent dispenser lid. 6. Close the dishwasher door 7. Set the programme Push the programme selector dial to make it pop out. Then turn the programme selector dial clockwise until the letter of the programme you wish to select corresponds with the programme marker on the control panel. When the washing programme has finished, it is recommended that the dishwasher is unplugged and the water tap turned off. In general it is not advisable to open the door while the machine is working; if the door is opened however, a safety device ensures that the machine stops. Important! Care must be taken if the door is opened during the hot phase or immediately after a programme has finished, as steam may escape. SEQ14en Operating sequence Regular use of Finish Dishwasher Cleaner cleans inaccessible parts, eliminates unpleasant food odours and helps prevent the buildup of limescale. Cleaning the central filter After each wash Scraps of food may accumulate in the drain filter A and should be removed by rinsing the filter under running water. To remove the drain filter simply pull it out by the handle. Once cleaned, refit the filter by pushing it back to its original position until it engages. Cleaning the large filter Every month If necessary clean the large filter B on both sides under running water, using a brush. The dishwasher must not be used without filters.

Incorrect repositioning and fitting of the filters will produce poor washing results. Cleaning the filters is vital to ensure correct operation of the machine. If necessary use only neutral detergents. Never use abrasive products, scouring pads or solvent acetone, trichloroethylene etc.. Prolonged periods of nonoperation If you are not using the machine for any period of time you are advised to 1. Unplug the appliance and then turn off the water. 2. Fill the rinse aid dispenser. 3. Leave the door ajar to prevent the formation of any unpleasant smells. 4. Leave the inside of the machine clean. Moving the machine If you have to move the machine moving house etc. 1. Unplug it. 2. Turn the water tap off. 3. Remove the water inlet and discharge hoses. 4. Pull the machine out together with the hoses. Avoid overtilting the machine during transportation. MAN03en Before contacting your local Service Force Centre, please carry out the checks listed below. Important If you call out an engineer to a fault listed below or to repair a fault caused by incorrect use or installation a

charge will be made even if the appliance is in guarantee. RIMUKen Something not working
Symptom Solution The machine will not start. The door has not been properly closed. The plug is not properly inserted in the power socket. There is no current at the socket. The machine does not fill. Ensure the water tap is open. Reposition the hose. The inlet hose may be blocked. Switch off the water supply and clean the filter. The filters are blocked. The spray arms are not rotating. Ensure the crockery is loaded correctly. The dishwasher will not drain. The drain hose may be squashed or bent. Reposition the hose. The sink may be blocked. Clear any blockages. The drain hose extension is not correct. Follow the instructions for connecting to the waste. There is no vent in the end of the drain hose. The machine is noisy.

Dishes are rattling against each other, refer to "Loading your machine". The spray arms are knocking against the dishes. The door is difficult to close. The dishwasher is not level, or not properly built in. Visible lime deposits or white. Check that there is salt and that the salt cap is tight. Check that the right level of the water softener is set. The dishes are not quite dry. The rinse aid has run out or too little is being used. The dishes are not clean. The baskets are too full. poor wash The dishes have not been arranged properly. The spray arms do not rotate. The spray arms are clogged. The filters are clogged. The filters are not in position. Not enough detergent has been used or it is unsuitable. The detergent is old or has gone hard. The salt container cap is not properly closed. The washing programme selected is too gentle. This information can be found on the rating plate located on the right hand side of the dishwasher door see picture. Service and spare parts In the event of your appliance requiring service, or if you wish to purchase spare parts please contact your local Zanussi Service Force Centre by telephoning 08705 929929 Your telephone call will be automatically routed to the Service Centre covering your post code area. Service Centre addresses can be found in the accompanying Customer Care book. Please note that it will be necessary to provide proof of purchase for any in-guarantee service calls. Customer Care Department For general enquiries concerning your Zanussi appliance or for further information on Zanussi products please contact our Customer Care Department by letter or telephone as follows Customer Care Department Zanussi 5577 High Street Slough Berkshire SL1 1DZ Tel 08705 727727 GAR02en Prod.No.. Ser. No.. Mod.. RA01 The appliance has been correctly installed and used only on the electricity supply stated on the rating plate.

The appliance has been used for normal domestic purposes only, and in accordance with the manufacturer's instructions. The appliance has not been serviced, maintained repaired, taken apart or tampered with by any person not authorised by us. All service work under this guarantee must be undertaken by a Zanussi Service Force Centre. Any appliance or defective part replaced shall become the Company's property. This guarantee is in addition to your statutory and other legal rights. Home visits are made between 8.30am and 5.30pm Monday to Friday. Visits may be available outside these hours in which case a premium will be charged. Exclusions This guarantee does not cover. Damage or calls resulting from transportation, improper use or neglect, the replacement of any light bulbs or removable parts of glass or plastic. Costs incurred for calls to put right an appliance which is improperly installed or calls to appliances outside the United Kingdom. Appliances found to be in use within a commercial environment, plus those which are subject to rental agreements. Products of Zanussi manufacture which are not marketed by Zanussi. European Guarantee If you should move to another country within Europe then your guarantee moves with you to your new home subject to the following qualifications. The guarantee starts from the date you first purchased your product. The guarantee is for the same period and to the same extent for labour and parts as exists in the new country of use for this brand or range of products. This guarantee relates to you and cannot be transferred to another user. Your new home is within European Community EC or European Free Trade Area. The product is installed and used in accordance with our instructions and is only used domestically, i.e. a normal household. The product is installed taking in account regulations in your new country.

Before you move please contact your nearest Customer Care centre, listed below, to give them details of your new home. They will then ensure that the local Service Organisation is aware of your move and able to look after you and your appliance. Any plumbing work required to install this appliance should be carried out by a qualified plumber or competent person. Remove all packaging before positioning the machine. If possible, position the machine next to a water tap and a drain. Water supply connections This dishwasher must be plumbed into a cold water supply. The water pressure must be within the limits given in the technical specifications. Your local Water Authority will advise you on the average mains pressure in your area. The dishwasher features fill and drain hoses which can be turned either to the left or the right to suit the installation. The locknut must be correctly fitted to avoid water leaks. Avoid bends or kinks in the hose which could prevent or slow down the water supply. If the machine is connected to new pipes or pipes which have not been used for a long time, you should run the water for a few minutes before connecting the inlet hose. This will prevent deposits of sand or rust clogging the inlet hose filter. **Installation instructions** The waste connection must be at a height of between 30 cm minimum and 100 cm maximum from the bottom of the dishwasher. The drain hose can face either to the right or left of the dishwasher. Ensure the hose is not bent or squashed as this could prevent or slow down the discharge of water. If you use a drain hose extension it must be no longer than 2 metres and its internal diameter must be no smaller than the diameter of the hose provided. Likewise the internal diameter of the couplings used for connections to the waste outlet must be no smaller than the diameter of the hose provided.