

Dymo Execulabel Lp150 Manual



File Name: Dymo Execulabel Lp150 Manual.pdf

Size: 4759 KB

Type: PDF, ePub, eBook

Category: Book

Uploaded: 1 May 2019, 19:38 PM

Rating: 4.6/5 from 624 votes.

Status: AVAILABLE

Last checked: 12 Minutes ago!

In order to read or download Dymo Execulabel Lp150 Manual ebook, you need to create a FREE account.

[**Download Now!**](#)

eBook includes PDF, ePub and Kindle version

[Register a free 1 month Trial Account.](#)

[Download as many books as you like \(Personal use\)](#)

[Cancel the membership at any time if not satisfied.](#)

[Join Over 80000 Happy Readers](#)

Book Descriptions:

We have made it easy for you to find a PDF Ebooks without any digging. And by having access to our ebooks online or by storing it on your computer, you have convenient answers with Dymo Execulabel Lp150 Manual . To get started finding Dymo Execulabel Lp150 Manual , you are right to find our website which has a comprehensive collection of manuals listed.

Our library is the biggest of these that have literally hundreds of thousands of different products represented.



Book Descriptions:

Dymo Execulabel Lp150 Manual

User Guide Cutter. LCD Display. Power. Style. Print. Ok. Cancel. Navigation. Numeric Keys. Return. Alpha Keys. Language. Symbols Currency. Shift. Figure 1 ExecuLabel LP150 Professional Labelmaker You can choose to print your Visit www.dymo.com for information on obtaining Warranty Registration. Please complete the warranty registration card and Remove the batteries if the labelmaker will Inserting the Label Cassette. Your labelmaker comes with one label cassette. Visit www.dymo.com for information about To insert the label cassette Getting Started. Follow the instructions in this section to print your Connecting the Power. The labelmaker is powered by six AAA alkaline To insert the batteries Figure 2. Remove Figure 3. The first time you use the labelmaker, Figure 3. If necessary, Figure 2 Become familiar with the location of the feature and Refer to Figure 1 The following sections Power. Figure 4 Selecting a Language. You can select from a number of different language The language option you choose determines the To select a language You are now ready to print your first label. To print a label Congratulations! You have printed your first label. Continue reading to learn more about the options The A button turns the power on and off. After You can also use the A button to cancel printing LCD Display. The labelmaker's LCD display shows a row of 13 The display window can accommodate 13 See Figure 5. The number The quick brown fox jum Figure 5. In addition, feature indicators appear on the display Figure 6. Font. Fixed length. CAPS mode. Figure 6 CAPS Mode. When CAPS mode is turned on, the CAPS mode The default setting is. CAPS mode on. When CAPS mode is off, all letters The Shift Key. Extra Key. The For example, when you The Print Contrast submenus. These features are Space Bar. The V key inserts one or more blank The Navigation Keys. You can review and edit your label using the left You can navigate through menu selections using Return Key. The Formatting Your Label. <http://www.hospvetcentral.pt/site/upload/deutz-f2l511-service-manual.xml>

- **dymo executabel lp150 manual, dymo executabel lp150 manual, dymo executabel lp 150 manual download, dymo executabel lp 150 manual pdf, dymo executabel lp 150 manual free, dymo executabel lp 150 manual instructions.**

You can choose from a number of formatting The labelmaker remembers the last selection Changing the Font. Three fonts are available for your labels Arial. Narrow, Arial Normal, and Arial Wide. When you select a font, that font applies to all To set the font You can choose from six different font styles in Normal. Bold. Italic. Outline. Shadow. Vertical. Mirror. Figure 7. When you select a style, that style applies to all See Using Symbols and. Special Characters on page 6 for more To set the font style To add an underline or box style Creating Multiple Line Labels. You can print a maximum of two lines on. To create a multipleline label Using Symbols and. Special Characters. Symbols and other special characters can be Adding Box and Underline Styles. You can further highlight your text by choosing a Figure 8 Adding Symbols. Printing Options. The labelmaker supports the extended symbol set To add a symbol To quickly see a row of symbols, you can press You can print multiple copies of a label at one time, Adding International Characters. The labelmaker supports the extended Latin For example, if French is selected as the language Currency Symbols The order these symbols appear depends on the Printing Multiple Copies. You can print up to 16 copies of a label at one time. When printing multiple copies, a dotted cutline is To print multiple copies of the label When printing is finished, the number of copies to Printing a Fixed Length Label. Normally, the length of the label is determined by However, you may You can specify a fixed length for a label in 0.1" To set the label length Fixed Length OFF; otherwise, all subsequent You can preview the text or format of your label To preview your label Aligning the Text. When you print a fixed length label you can choose To align the

Adjusting the Print Contrast. You can adjust the print contrast to fine tune the contrast. The labelmaker has a powerful memory feature. Storing Label Text. <http://distributoram.com/files/deutz-f21511-engine-manual.xml>

The labelmaker automatically keeps the last three. In addition, you can store the current label text. The first of the memory fields is displayed. You can store new text in any of the memory formats. In addition to label text, you can store up to three. To store the current format. The first of the memory fields is displayed. You can store a new format in any of the. Recalling Stored Labels. You can easily recall labels and formats stored in. To recall labels or formats. Printed. The first memory location is displayed similar to. Your labelmaker is designed to give you long and. Clean your labelmaker from time to time to keep it. To clean the print head. Review the following possible solutions if you encounter a problem while using your labelmaker. Solution. No display. Poor Print Quality. Printing. No action required. Message disappears when printing is finished. Too many characters. Exceeded maximum number of characters in buffer. Delete some or all of the buffer text. Too many lines. Exceeded maximum number of lines allowed. Select another format. Insert Tape Cassette. Label cassette missing or empty. Insert a new label cassette. Battery low. Batteries almost discharged. Replace batteries. Tape Jam. Motor is stalled due to label jam. Set. Fixedlength label selected and the length necessary to. Do one of the following. Replace discharged batteries. Ensure label cassette is installed properly. Clean the print head. Replace the label cassette. If you still need assistance, contact DYMO Customer Support. Refer to Contacting Customer Support at the back. Documentation Feedback. We are constantly working to produce the highest quality documentation for our products. We welcome your feedback. Send us your comments or suggestions about our user guides. Please include the following information with your. We also welcome your suggestions about additional topics you would like to see covered in the documentation. Please keep in mind that this email address is only for documentation feedback.

If you have a technical question, please. US FCC Class B Compatibility. Safety EN 60950, IEC 950, UL 1950. Esselte is an ISO 14001 registered company. Plastic components of this printer have been marked to enable final disposal in a manner. The following table provides a list of telephone numbers to reach DYMO Sales and Support departments. You can also reach DYMO at www.dymo.com. Country. Telephone. Fax. Australia. Austria. Belgium. Canada. Denmark. Germany. Hong Kong. Hungary. Mexico. The Netherlands. New Zealand. Slovakia. Sweden. Turkey. United Kingdom. United States. DYMO Corporation. Stamford, CT 06902. 4561. ExecuLabel is a trademark of DYMO Corporation. DYMO is a registered trademark of Esselte Corporation. All other trademarks are the. You can choose to print your. Remove the batteries if the labelmaker will. Labels in many different sizes and styles. The not be used for a long period of time. Become familiar with the location of the feature and function keys on your labelmaker. Refer to Figure 1 on the inside front cover. The following sections describe each feature in detail. Power. The button turns the power on and off. After A two minutes of no activity, the power is switched off. Figure 4 automatically. The last label created is 4. Press firmly until cassette clicks into place. The default setting is Return Key CAPS mode on. When CAPS mode is off, all letters. The key inserts a new line on your label. Extra Key Shift Key. The key displays Units, Copies, Normal. On multiline labels, both lines are underlined. In Bold boxstyle mode, all the lines are enclosed in one. Italic box style. A twoline label is previewed as a. Storing Label Text. singleline label. The labelmaker automatically keeps the last three. To preview your label. Labels printed in a text buffer. In addition, you can. 1. Press. store up to three specific labels you use frequently. 2. Select Preview and press. To store the current label text. 3. Select. The first memory location is displayed similar to storing a label or format. 3.

Select a label or format to recall and press. Caring for Your Labelmaker. Your labelmaker is designed to give you long and troublefree service, while requiring very little maintenance. Clean you. Printing. No action required. Too many characters. Delete some or all of the bu. DYMO is a registered

trademark of Esselte Corporation. Getting Started Follow the instructions in this section to print your first label. Connecting the Power The labelmaker is powered by six AAA alkaline batteries. To save power, the labelmaker will automatically turn off after two minutes of inactivity. To insert the batteries 1. Remove the battery compartment cover. Remove the batteries if the labelmaker will not be used for a long period of time. Inserting the Label Cassette Your labelmaker comes with one label cassette. Visit www.dymo.com for information about purchasing additional label cassettes. To insert the label cassette 1. Lift the label cassette cover to open the label compartment. See Figure 3. Figure 3 The first time you use the labelmaker, remove the protective cardboard insert from between the print head and pinch roller. See Figure 3. 2. Make sure the label and ribbon are taut across the mouth of the cassette and that the label passes between the guideposts. If necessary, turn the spool clockwise to tighten the ribbon. 3. Insert the cassette with the label and ribbon positioned between the print head and pinch roller. See Figure 4. Remove cardboard insert AUS NZ US Selecting a Language You can select from a number of different language options. By default, the language is set to English. The language option you choose determines the default units of measure inches or millimeters and the character set that is available. To select a language 1. Press. 2. Use the arrow keys to select the language you want and press. Printing Your First Label You are now ready to print your first label. To print a label 1. Enter text to create a simple label. 2.

Press. 3. Use the cutter lever to cut the label. Congratulations! You have printed your first label. Continue reading to learn more about the options available for creating labels. Getting to Know the Labelmaker Become familiar with the location of the feature and function keys on your labelmaker. Refer to Figure 1 on the inside front cover. The following sections describe each feature in detail. Power The A button turns the power on and off. After two minutes of no activity, the power is switched off automatically. The last label created is remembered and displayed when the power is turned back on. The previously selected style settings are also restored. You can also use the A button to cancel printing and return to edit mode. LCD Display The labelmaker's LCD display shows a row of 13 characters. However, you can enter up to 99 characters and spaces. The display window can accommodate 13 characters. As you type more characters, they begin to scroll to the left. See Figure 5. The number of characters actually displayed can vary due to proportional spacing. Figure 5 In addition, feature indicators appear on the display to let you know when a feature is selected. See Figure 6. Figure 6 CLICK! Language The quick brown fox jumps over the lazy dog. The default setting is CAPS mode on. When CAPS mode is off, all letters entered appear in lower case. Shift Key The key, when used in combination with an alphabet key, changes the case of the selected letter. When used in combination with number keys or function keys, the key selects the alternate function shown on the key. Space Bar The V key inserts one or more blank spaces in your text. Navigation Keys You can review and edit your label using the left and right arrows on the navigation key. Using with the left or right arrows moves the cursor to the beginning or end of the label text.

You can navigate through menu selections using the up and down arrow keys, and then press to make a selection. Cancel The key allows you to exit from a menu without making a selection or to cancel an action. Return Key The key inserts a new line on your label. Extra Key The key displays Units, Copies, Preview, and Print Contrast submenus. These features are described later in this User Guide. Formatting Your Label You can choose from a number of formatting options to enhance the appearance of your labels. The labelmaker remembers the last selection made so that each time you enter one of the feature menus described in this section, you are positioned at the last item selected from that menu. Changing the Font Three fonts are available for your labels Arial Narrow, Arial Normal, and Arial Wide. When you select a font, that font applies to all characters on a label. To set the font 1. Press the key. 2. Use the arrow keys to move to the desired font and then press. Styles can be used with alphanumeric characters and symbols. See Using Symbols and

Special Characters on page 6 for more information on printing symbols. To set the font style 1. Press the key. 2. Use the arrow keys to select a style and then press. Adding Box and Underline Styles You can further highlight your text by choosing a box or underline style. Figure 8 A label can be underlined or enclosed in a box, but not both together. On multiline labels, both lines are underlined. In boxstyle mode, all the lines are enclosed in one box style. To create a multiline label 1. Type the text for the first line, and press. A new line character is displayed at the end of the first line, but will not print on the label. 2. Type the text for the second line. Using Symbols and Special Characters Symbols and other special characters can be added to your labels.

Figure 9 DYMO Underline Square Box Pointed Box Rounded Box Crocodile Box Scroll Box Normal Bold Italic Outline Shadow Vertical Mirror DYMO DYMO DYMO DYMO DYMO The left and right arrows move horizontally along a row of symbols. The up and down arrow keys scroll vertically through the rows of symbols. To quickly see a row of symbols, you can press the letter corresponding to the row you want. 3. When you locate the symbol, press to add the symbol to your label text. Adding International Characters The labelmaker supports the extended Latin character set using RACE technology. Similar to using a mobile phone keypad, if you type a letter multiple times within a very short time, you will scroll through variations on that letter. For example, if French is selected as the language and you repeatedly press the letter a, you will see a a a. The character variations and the order in which the variations appear depend on the language you have selected to use. Printing Options You can print multiple copies of a label at one time, print fixed length labels, review label text and format, and adjust the printing contrast. Printing Multiple Copies You can print up to 16 copies of a label at one time. When printing multiple copies, a dotted outline is printed between each label. When printing is finished, the number of copies to print returns to the default value of 1. Printing a FixedLength Label Normally, the length of the label is determined by the length of the text entered. However, you may wish to make a label for a specific purpose that is a fixed length regardless of the length of the text. You can specify a fixed length for a label in 0.1" 2 mm increments between 1.5" 40 mm and 15.0" 400 mm. The preset fixed length is 4.0" 100 mm. Any change you make to the fixed length setting remains in effect until you change it. A twoline label is previewed as a singleline label. To preview your label 1. Press. 2.

Select Preview and press. 3. Select Text or Format and press. If you select Text, the text of the label scrolls across the display. If you select Format, the format selected displays briefly. Aligning the Text When you print a fixed length label you can choose to align the text at the left, center, or right side of the label. For multiline labels, all lines of text are aligned left, center, and right relative to each other. The alignment setting remains active until you reset the alignment. Adjusting the Print Contrast You can adjust the print contrast to fine tune the print quality of your label. To set the contrast 1. Press. 2. Select Set Contrast and press. 3. Use the arrow keys to select a contrast setting and press. Storing Label Text The labelmaker automatically keeps the last three labels printed in a text buffer. In addition, you can store up to three specific labels you use frequently. The first of the memory fields is displayed. 3. Use the arrow keys to move through the fields. You can store new text in any of the memory locations, however, if you select a location that is filled, the previous label text will be overwritten. 4. Select a memory location and press. Your label text is saved and you are returned to the label. Storing Formats In addition to label text, you can store up to three specific label formats you use frequently. This feature stores only the formatting information not the label text. The first of the memory fields is displayed. 3. Use the arrow keys to move through the fields. You can store a new format in any of the memory locations, however, if you select a location that is filled, the previously stored format will be overwritten. 4. Select a field and press. The word Name appears in the field. 5. Enter a name for the format and press. The label format is saved and you are returned to the label. The first memory location is displayed similar to storing a label or format.

3. Select a label or format to recall and press. Caring for Your Labelmaker Your labelmaker is designed to give you long and troublefree service, while requiring very little maintenance. Clean your labelmaker from time to time to keep it working properly. If you still need assistance, contact DYMO Customer Support. Refer to Contacting Customer Support at the back of this User Guide to locate the contact number for your country. Documentation Feedback We are constantly working to produce the highest quality documentation for our products. We welcome your feedback. Send us your comments or suggestions about our user guides. If you have a technical question, please contact Customer Support. Printing No action required. Too many characters Exceeded maximum number of characters in buffer. Delete some or all of the buffer text. Too many lines Exceeded maximum number of lines allowed. Insert Tape Cassette Label cassette missing or empty. Insert a new label cassette Battery low Batteries almost discharged. Plastic components of this printer have been marked to enable final disposal in a manner that is sensitive to the environment. DYMO is a registered trademark of Esselte Corporation. All other trademarks are the property of their respective holders. Be sure to check that it is the user manual to exactly the device that you are looking for. In our database Dymo ExecuLabel LP150 it belongs to the category Printer. A user manual Dymo ExecuLabel LP150 is taken from the manufacturer, a Dymo company it is an official document, so if you have any doubts as to its contents, please contact the manufacturer of the device Dymo ExecuLabel LP150 directly. You can view the user manual Dymo ExecuLabel LP150 directly online or save and store it on your computer. If you have any questions, you can ask them in the form below. Other users viewing this website will have the opportunity to help you solve your problem with Dymo ExecuLabel LP150.

Remember that you can also share the solution. If you solved the problem yourself, please write the solution to the problem with Dymo ExecuLabel LP150 you will surely help many users by doing so. Ask a question our users can help you. You can choose to print your labels in many different sizes and styles. Label cassettes are also available in a wide range of colors. Visit www.dymo.com for information on obtaining labels and accessories for your labelmaker. Page 4 CLICK! Getting to Know the Labelmaker Become familiar with the location of the feature and function keys on your labelmaker. Power Figure 4 4. Press firmly until cassette clicks into place. 5. Close the label cassette cover and press A to turn on the power. Selecting a Language You can select from a number of different language options. By default, the language is set to English. When CAPS mode is turned on, the CAPS mode indicator is shown on the display and all letters that you enter will be capitalized. The default setting is CAPS mode on. When CAPS mode is off, all letters entered appear in lower case. The key allows you to exit from a menu without making a selection or to cancel an action. Shift Key Extra Key The key, when used in combination with an alphabet key, changes the case of the selected letter. Page 6 Adding Font Styles You can choose from six different font styles in addition to Normal Normal Bold Italic Outline Shadow Vertical Mirror Figure 7 When you select a style, that style applies to all characters. Styles can be used with alphanumeric characters and symbols. See Using Symbols and Special Characters on page 6 for more information on printing symbols. To set the font style 1. Press the key. 2. Use the arrow keys to select a style and then press. Page 7 Adding Symbols Printing Options The labelmaker supports the extended symbol set as shown in Figure 9. To add a symbol 1. Press Symbols. The first row of symbols shown in the table appears in the display. 2.

Use the arrow keys to move to the desired symbol. The left and right arrows move horizontally along a row of symbols. The up and down arrow keys scroll vertically through the rows of symbols. To quickly see a row of symbols, you can press the letter corresponding to the row you want. 3. Page 8 Previewing Your Label You can preview the text or format of your label prior to printing. A twoline label is previewed as a singleline label. To preview your label 1. Press. 2. Select Preview and press. 3. Select Text or Format and press. If you select Text, the text of the label scrolls across the display. If you select Format, the format selected displays briefly. Aligning the Text When you print a fixed length label you can choose to align the text at the left, center, or right side of the label. Page 9

Recalling Stored Labels and Formats You can easily recall labels and formats stored in memory to use at a later time. The first memory location is displayed similar to storing a label or format. 3. Select a label or format to recall and press. Caring for Your Labelmaker Your labelmaker is designed to give you long and troublefree service, while requiring very little maintenance. Page 10 Troubleshooting Review the following possible solutions if you encounter a problem while using your labelmaker. Too many characters Exceeded maximum number of characters in buffer. Too many lines Exceeded maximum number of lines allowed. ExecuLabel is a trademark of DYMO Corporation. Labels are genuine Dymo, right way round, correctly positioned, but blue light keeps flashing. Since you are sure the labels are not run out the only thing it can be is the labels are not loaded properly, double check the loading. How do I change this to normal Ensure the printer is turned on. Insert new batteries, charge battery pack, or plug in power adapter. Remove power adapter and batteries, and then reattach power to restart the printer.

The reason for the 1 star is that, the display is no long working, you are able to. It will not feed the tape through the print rollers when the PRINT button is pressed, the roller is turning How do I leave a blank line space. When I print the label it reverts to single spacing and not the double. Programmers manual page 23 The user guide mentions nothing so it is down to programming. An easy way would be to insert a period, on the blank line. Ive tried trouble shooting it, but its still not working Answer questions, earn points and help others. Label cassettes are also available. Dymo LP150 page 4 4 Figure 4 4. Press firmly until cassette clicks into place. 5. Close the label cassette cover and press A to turn on the power. Selecting a Language You can select from a number of different language options. The language option you choose determines the default units of measure inches or millimeter. When CAPS mode is turned on, the CAPS mode indicator is shown on the display and all letters that you enter will be capitalized. The default setting is CAPS mode on. Shift Key The key, when used in combination with an alpha. Dymo LP150 page 6 6 Adding Font Styles You can choose from six different font styles in addition to Normal Figure 7 When you select a style, that style applies to all characters. Styles can be used with alphanumeric characters and symbols. To set the font style. Dymo LP150 page 7 7 Adding Symbols The labelmaker supports the extended symbol set as shown in Figure 9. To add a symbol 1. Press. The first row of symbols shown in the table appears in the display. 2. Use the arrow keys to move to the desired symbol. The left and right arrows move horizontally along a row of symbols. The up and down arrow keys scroll vertically. Dymo LP150 page 8 8 Previewing Your Label You can preview the text or format of your label prior to printing. To preview your label 1. Press. 2. Select Preview and press. 3. Select Text or Format and press.

If you select For. Dymo LP150 page 9 9 Recalling Stored Labels and Formats You can easily recall labels and formats stored in memory to use at a later time. The first memory location is displayed similar to storing a label or format. 3. Select a label or format to recall and press. Dymo LP150 page 10 10 Troubleshooting Review the following possible solutions if you encounter a problem while using your labelmaker. If you still need assistance, contact DYMO Customer Support. Refer to Contacting Customer Support at the back of this User Guide to locate the contact number for your country. Documentation Feedback We are constantly working.